

# 30-4401 FLUID PRESSURE GAUGE QUICK START GUIDE



## DIGITAL DISPLAY GAUGE

**Gauge Configuration:** The gauge bezels are threaded on to the gauge cup. Rotate the bezel in a counter-clockwise direction to remove it from the cup. Once removed, the faceplate can be changed and/or a different bezel can be installed.

**Electrical Connection:** In order to use the gauge, only the red and black wires need to be connected. The white and blue wires do not need to be connected. Connect the red wire to switched +12V. Connect the black wire to a known good ground. Plug the connector on the harness into the mating connector on the sensor. See the connection diagram below.

**Sensor Installation:** The AEM pressure sensor has 1/8"NPT external threads. Install the sensor into a bung with mating threads.

**Troubleshooting:** The gauge may show readings of a number greater than "0" or "---" if the gauge is powered up shortly after inserting the sensor connector. This is due to temporary pressure buildup in the connector cavity when the connector is inserted. The connection between the harness and sensor is water resistant, yet non-hermetic, allowing pressure to bleed off. Due to normal manufacturing variances, bleed-off times will vary, but are usually less than 5 minutes after the connector has been inserted.

The **30-4401** Kit Contains:

- (1) Pressure Gauge assembly
- (1) Pressure Sensor
- (1) Pressure Cable
- (4) Butt Connector
- (1) Silver Bezel
- (1) White Oil Pressure Faceplate
- (1) Black Fuel Pressure Faceplate
- (1) White Fuel Pressure Faceplate
- (1) Instructions

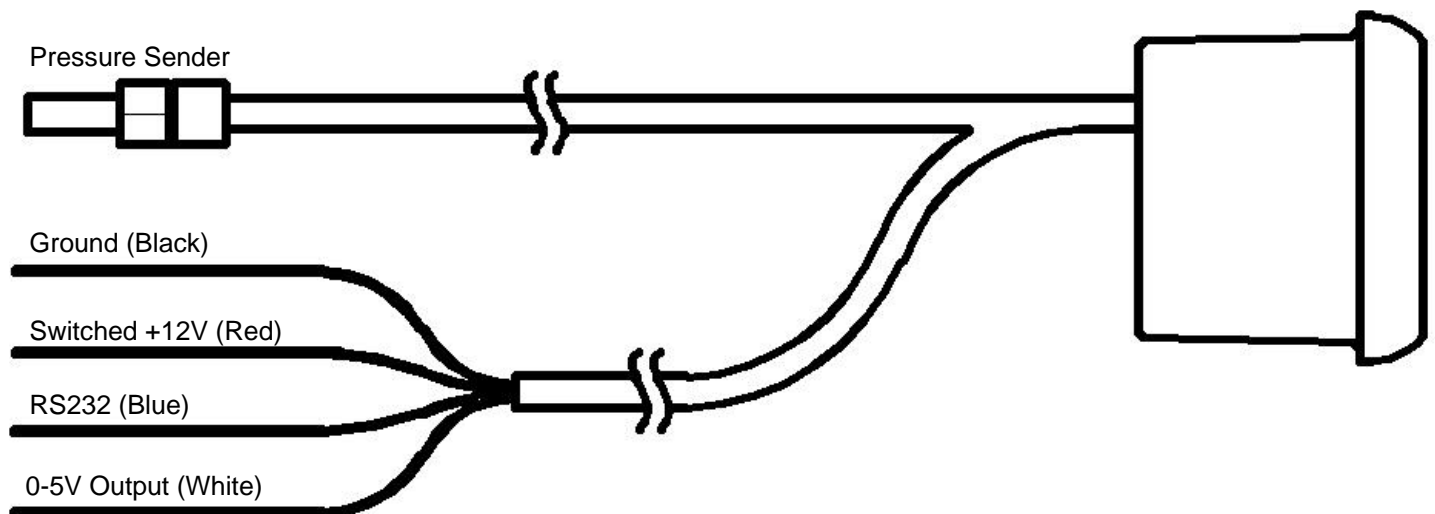


Figure 1. Connection Diagram