

## **Spark Plug Gap Tool**

To set consistent plug gaps, insert plug into holder, put feeler gauge between ground strap and electrode, and gently turn the knurled knob until feeler gauge is snug.

