


INSTRUCTION MANUAL & PARTS BREAKDOWN

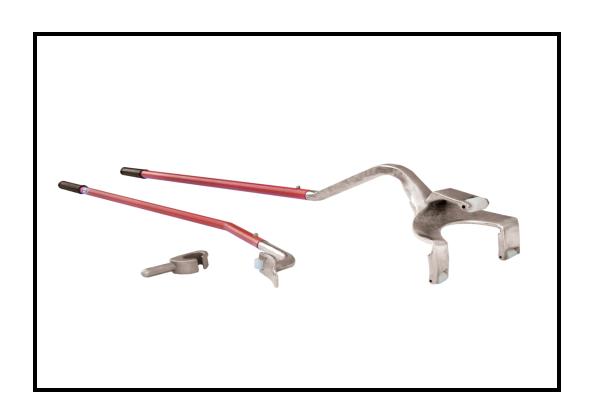

MODEL 71050

Golden Buddy Tool Instruction Manual



INSTRUCTION MANUAL

71050 Demount Instructions



1. Remove valve core, break tire beads, lubricate well.





2. Kick tool between bead and rim





3. Pull handle across wheel to opposite side to demount top bead. (see figures below)







4. Keeping tool engaged, pull handle back to starting side. Be sure handle returns almost to the ground. (See next two pictures)





71050 Demount Instructions



5. Repeat Steps 1-3 to demount bottom bead.



6. Pull handle down, remove tire.



7. You have just removed a tire the Buddy Way!



INSTRUCTION MANUAL



1. Position the wheel drop center down and position a clean, properly lubricated tire for mounting.



2. The Golden Buddy mount bar maybe used to press the first bead over the lip allowing the bead to fall into the rim gutter.

BEAD KEEPER METHOD (RECOMMENDED)



3. Place bead keeper on the wheel to hold the bead as the tire is mounted. Begin working around the edge where the bead is not yet mounted.



4. Use the Golden Buddy mount bar to pry the bead onto the wheel. Continue working around the wheel until the tire is mounted.



STANDING METHOD



3. Stand on the tire to retain the bead. Begin working at one edge where the bead is not yet mounted.




4. Use the Golden Buddy Mount bar to pry the bead onto the wheel. Continue working the wheel until the tire is mounted. It may be necessary to widen your stance.



INSTRUCTION MANUAL

Parts List For

Golden Buddy Model 71050

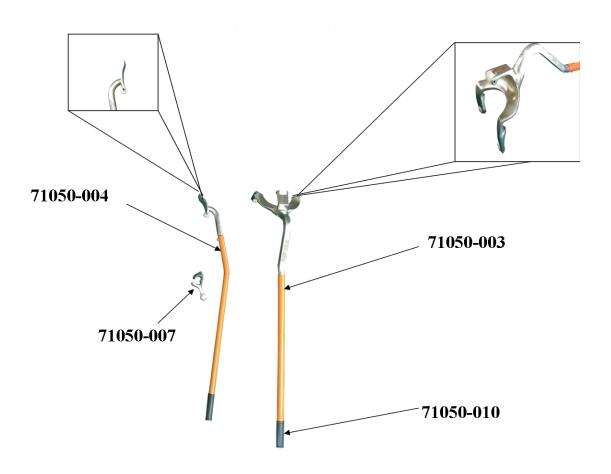


| Parts # | Description | QTY (Needed) |
|-----------|------------------------------|--------------|
| 71050-003 | Dismount Handle | 1 |
| 71050-004 | Mount Handle for 71050 | 1 |
| 71050-007 | Bead Keeper for Golden Buddy | 1 |
| 71050-010 | Rubber Grip for 71050 | 1 |



PARTS BREAKDOWN

Parts List For

Golden Buddy Model 71050

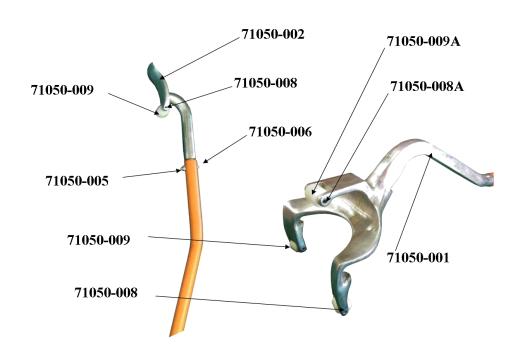

| Part # | Description | QTY (Needed) |
|------------|---------------------------------------|-----------------|
| 71050-001 | Dismount Head Only | 1 |
| 71050-002 | Mount Head Only | 1 |
| 71050-005 | Handle Nut | 1 |
| 71050-006 | Handle Screw | 1 |
| 71050-008 | Pin for Roller | 3 |
| 71050-008A | Pin for Center Dismount Head Roller | 1 |
| 71050-009 | Roller for Mount/Dismount Head | 3 |
| 71050-009A | Center Roller for Mount/Dismount Head | 1 |