
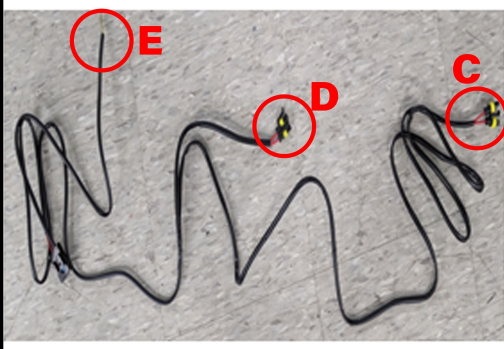


STEP 1

CONNECT (A) AND (B) CONNECTORS TO OEM FACTORY VEHICLE CONNECTORS.

IF INSTALLING NEW TUNDRA DRL AIR VENT LIGHTS, PLEASE REFER TO AIR VENT LIGHTS INSTALLATION GUIDE TO CONTINUE HEADLIGHT INSTALLATION.

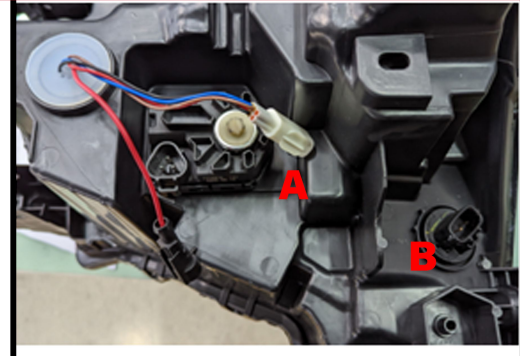

STEP 2



LOCATE PROVIDED DRL/INITIATION HARNESS. ROUTE HARNESS ACCORDINGLY.

CONNECT (C) LONG SIDE TO DRIVER'S SIDE.
CONNECT (D) SHORT SIDE TO PASSENGER'S SIDE.
CONNECT (E) FORK SPADE CONNECTOR TO POSITIVE(+) SIDE OF BATTERY.

IF INSTALLING 511089X (DRL AIR VENT LIGHTS), PLEASE REFER TO 511089X INSTALLATION GUIDE AND USE THE PROVIDED 5-CONNECTOR HARNESS INSTEAD OF THE 3-CONNECTOR HARNESS SHOWN IN IMAGE HERE.

STEP 3

CONNECT DRL/INITIATION HARNESS TO DRIVER AND PASSENGER SIDES OF THE NEW HEADLIGHTS. CONNECT AND TIGHTEN FORK SPADE CONNECTOR TO POSITIVE TERMINAL ON BATTERY.

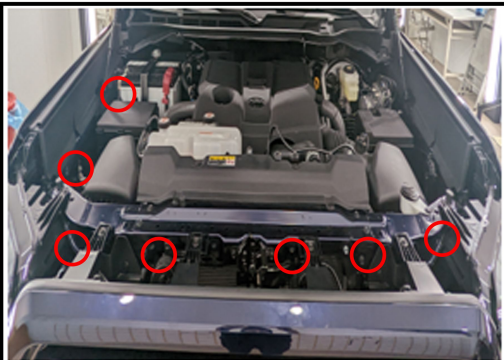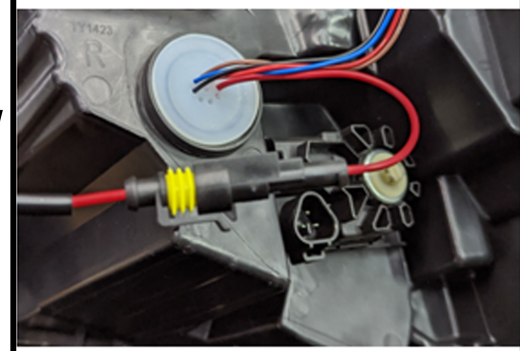

STEP 4

ROUTE AND SECURE DRL/INITIATION HARNESS USING PROVIDED ZIP TIES AS SHOWN.

TEST ALL FUNCTIONS OF LIGHTS BEFORE DRIVING ON THE ROAD.

STEP 5

THE CIRCLED AREA SHOWS THE LOCATION OF AMBER/WHITE DRL SWITCH.

PRESS AMBER FOR AMBER LIGHT MODE FOR DRL/PARKING LIGHT.
PRESS WHITE FOR WHITE LIGHT MODE FOR DRL/PARKING LIGHT.

