

STEP 1

THESE TAIL LIGHTS WILL FIT HALOGEN WITHOUT BLIS MODELS OUT OF THE BOX. PLEASE ONLY REFER TO THIS INSTALLATION GUIDE FOR THE FACTORY LED WITH BLIS MODELS, WHICH WILL REQUIRE SWAPPING THE HARNESS AND REUSE OF THE OEM BLIS MODULE.

REMOVE THE 4 SCREWS HOLDING THE BLIS COVER ON THE NEW TAIL LIGHT, CIRCLED IN IMAGE.




STEP 2

REMOVE THE BLIS COVER ON NEW TAIL LIGHT. DISCONNECT HARNESS FROM BLIS COVER, CIRCLED IN IMAGE.



STEP 3

LOCATE THE 6-PIN HARNESS PROVIDED WITH NEW TAIL LIGHT. CONNECT 6-PIN HARNESS TO HARNESS THAT WAS DISCONNECTED IN PREVIOUS STEP, CIRCLED IN IMAGE.

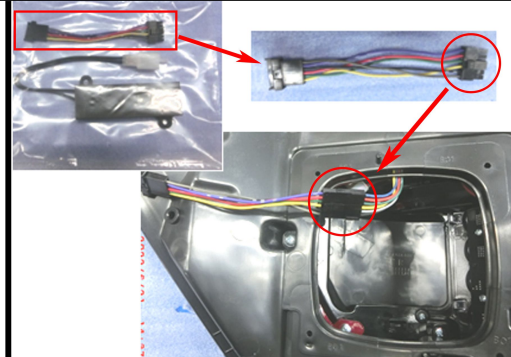

STEP 4

(OEM BLIS MODULE TRANSFERRING)

REMOVE OEM BLIS MODULE FROM OEM TAIL LIGHT BY REPEATING STEP 1 AND 2 ON OEM TAIL LIGHT. REMOVE OEM BLIS MODULE FROM OEM TAIL LIGHT AND SET ASIDE.

DO NOT DROP OEM BLIS MODULE

6-PIN CONNECTOR OF BLIS SENSOR

OEM BLIS MODULE

OEM BLIS SENSOR

STEP 5

1. CONNECT 6-PIN HARNESS FROM NEW TAIL LIGHT TO 6-PIN CONNECTOR ON OEM BLIS MODULE.
2. FASTEN 4 SCREWS TO INSTALL OEM BLIS MODULE TO NEW TAIL LIGHT, CIRCLED IN IMAGE TO FINISH INSTALLATION. TEST ALL FUNCTIONS OF LIGHT BEFORE DRIVING.

