



## STEP 1

**UNSCREW FOUR CIRCLED SCREWS TO REMOVE BLIS COVER FROM NEW TAIL LIGHT.**

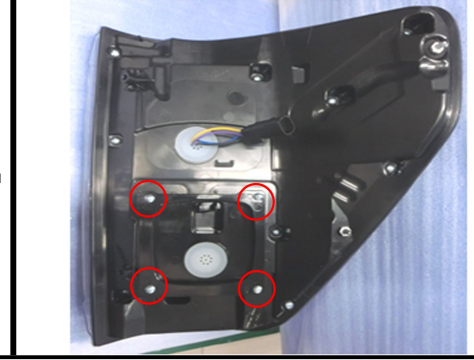

**BLIS SENSOR CONNECTOR(2-PIN)**

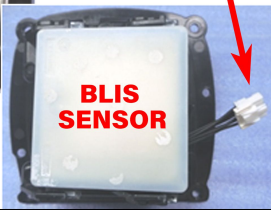


## STEP 2

**UNSCREW BLIS MODULE FROM FACTORY (OEM) TAIL LIGHT BY REPEATING THE PREVIOUS STEP. DISCONNECT 2-PIN BLIS MODULE CONNECTOR TO FULLY REMOVE FROM FACTORY TAIL LIGHT.**

## STEP 3

**CONNECT 2-PIN BLIS MODULE CONNECTOR AND INSERT BLIS MODULE TO NEW TAIL LIGHT.**

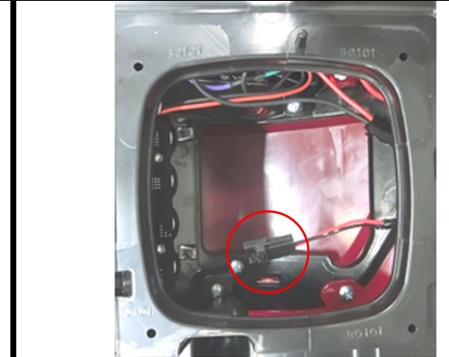

## STEP 4

**REMOVE SCREWS FROM BLIS COVER IN STEP 1 AND SET COVER ASIDE. SCREW BLIS MODULE INTO NEW TAIL LIGHT USING SCREWS REMOVED FROM COVER. TEST ALL FUNCTIONS OF LIGHT BEFORE DRIVING.**

