
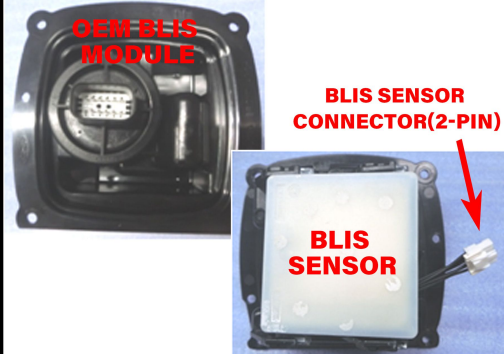


STEP 1

UNSCREW FOUR CIRCLED SCREWS TO REMOVE BLIS COVER FROM NEW TAIL LIGHT.

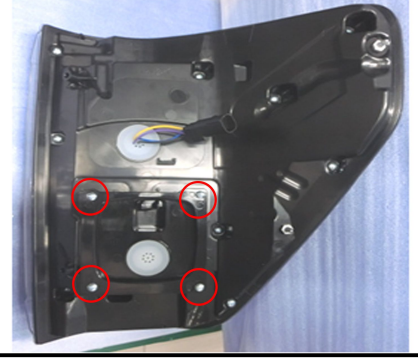


STEP 2

UNSCREW BLIS MODULE FROM FACTORY (OEM) TAIL LIGHT BY REPEATING THE PREVIOUS STEP. DISCONNECT 2-PIN BLIS MODULE CONNECTOR TO FULLY REMOVE FROM FACTORY TAIL LIGHT.

STEP 3

CONNECT 2-PIN BLIS MODULE CONNECTOR AND INSERT BLIS MODULE TO NEW TAIL LIGHT.

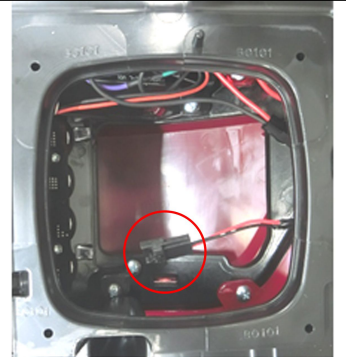

STEP 4

REMOVE SCREWS FROM BLIS COVER IN STEP 1 AND SET COVER ASIDE. SCREW BLIS MODULE INTO NEW TAIL LIGHT USING SCREWS REMOVED FROM COVER. TEST ALL FUNCTIONS OF LIGHT BEFORE DRIVING.

