

## **INSTALLATION INSTRUCTIONS Replacement Pillar**



2650-1083-00 Rev. A


## **Pillar installation Directions:** Read directions before starting installation.

- 1) Remove Stock Pillar by removing the screw located under the cap(s) of pillar handle. (Photo 1)
- 2) Install Gauges in new pillar.
- 3) Tape or secure gauge wiring to back of pillar. (Photo 2)
- 4) Install new pillar in place of old pillar.
- 5) Use provided screw to hold pillar in place:
  - · Make sure screw is aligned with factory hole to avoid cross threading
  - · Don't over tighten screw (Photo 3)



(Photo 1)



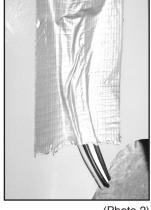





(Photo 3)