

INSTALLATION INSTRUCTIONS ELECTRIC SPEEDOMETER SENDER (SINE WAVE)

2 Wire Sender, 8 pulse per revolution



Wiring

