


### Pillar installation Directions:

Read directions before starting installation.

- 1) Remove Stock Pillar by removing the screw located under the cap(s) of pillar handle. (Photo 1)
- 2) Install Gauges in new pillar.
- 3) Tape or secure gauge wiring to back of pillar. (Photo 2)
- 4) Install new pillar in place of old pillar.
- 5) Use provided screw to hold pillar in place:
  - Make sure screw is aligned with factory hole to avoid cross threading
  - Don't over tighten screw(Photo 3)



Dodge Ram Shown (Photo 1)

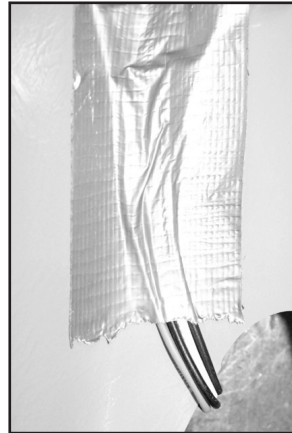

(Photo 2)



(Photo 3)