

Installation Instructions

Stabilizer Bar Relocation Bracket #8001192.1

2005-17 Toyota Tacoma

Kit Contents	Description	Part Number	Qty
	Relocation Bracket	8001192	2
	Bolt, M10-1.5 Hex	H13074749	4
	Washer, M10	H50025100	4
	Instructions	8001192.1INST	1

NOTES: Read All Instructions Before Beginning Installation

- Only qualified mechanics experienced in the installation and removal of suspension components should perform this installation.
- Use of a hoist and screw jack is highly recommended and will substantially reduce installation time.
- Never work on or under a vehicle unless it is properly supported.

Stabilizer Bar Relocation Bracket Install



Photo 1

1. Loosen and remove the hardware that secures the underbody cover, then, remove the cover as shown. (See Photo 1)

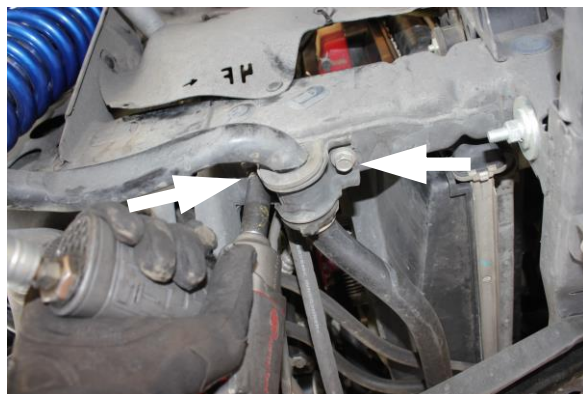


Photo 2



Photo 3

2. Loosen and remove the OE hardware that secures both the left and right side bushing brackets to the frame and let the bar rotate downward as shown. (See Photos 2 & 3)

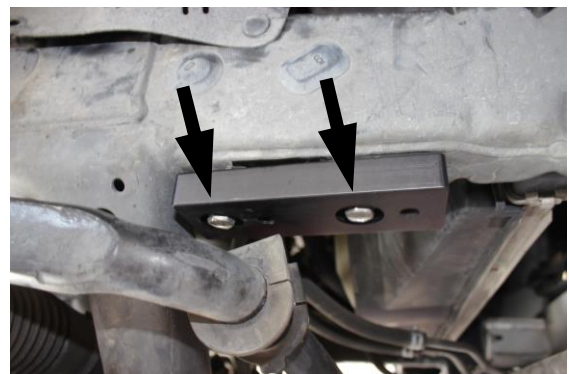


Photo 4

3. Install both left and right side Eibach relocation brackets and secure them to the frame with the OE hardware removed in Step 2 Photo 2. (See Photo 4)

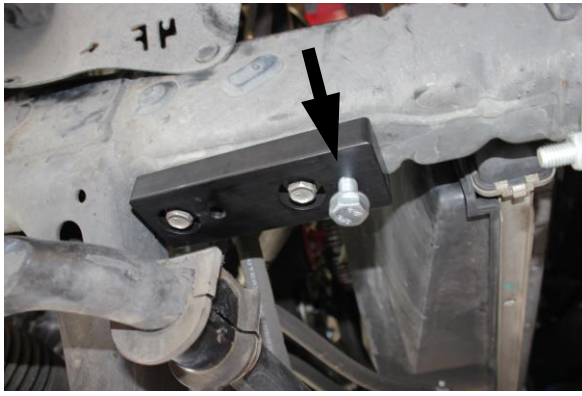


Photo 5



Photo 6



Photo 7

4. Install one of the provided hex bolts into the forward hole, but do not tighten, then, reinstall the OE bushing bracket onto the bushing and slide the slotted end of the bracket forward until its fully seated against the hex bolt as shown. **Note: Do not tighten the hardware at this time. (See Photos 5, 6 & 7)**



Photo 8



Photo 9

5. You can now install the provided rear hex bolt and secure the bushing bracket as shown. **Note: If the holes don't line up with the bushing bracket, you may need to loosen the relocation bracket hardware to adjust the alignment for better fitment. (See Photos 8 & 9)**
6. Double check to make sure everything is properly positioned and tightened, then, reinstall the underbody cover using the OE hardware.
7. After road testing, double check all hardware to make sure everything is properly tightened and re-tighten if necessary.