

**INSTALL MANUAL****NOTICE**

**Only qualified and experienced individuals or experienced automobile mechanics should remove and install the air flow sensor.**

**The installation of this component requires considerable knowledge and expertise of automobile repair and maintenance, including, in particular, the installation and operation of the air flow sensor. Individuals without appropriate training or experience should not attempt to install this component themselves. To ensure safe and proper removal and installation of the air flow sensor, even experienced mechanics should obtain and refer to the applicable vehicle Repair and Service Manual.**

**DISCLAIMER - Hitachi Automotive Systems America, Inc. (“Hitachi Automotive”) makes no warranties express or implied including but not limited to, the implied warranties of merchantability and fitness for a particular purpose. Hitachi Automotive shall not in any respect incur any liability for any damages, including but not limited to, direct, indirect, special or consequential arising out of, resulting from, or in any way connected to this manual or your reliance OR USE OF THIS MANUAL whether or not based upon warranty, contract, tort or otherwise.**

## Air Flow Sensor Installation

---

### Recommended Tools

Ratchet  
Extension  
Socket(s)  
Torque wrench

### Additional Items



1. Disconnect the air flow sensor connector.
2. Remove the air flow sensor bolts.
3. Remove the air flow sensor from the air cleaner case.



4. Slide the air flow sensor into the air cleaner case.



5. Install the bolts and torque to factory specifications.
6. Connect the air flow sensor connector.