 


Ilco EZ[®]-Clone PLUS with Snoop Programming Instructions

1

Insert Original Key, Press "Read". Insert SNOOP, Press "Write".

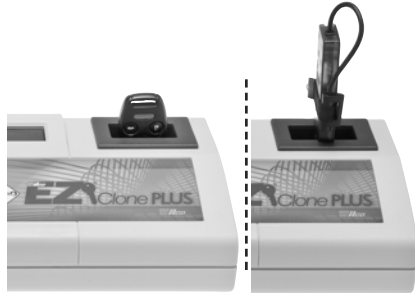

 
2

Place the SNOOP on the customer's key. Insert key into ignition and turn to "ON" position 2 times.



3

Place the SNOOP in Ilco EZ[®]-Clone PLUS, Press "Write". The Ilco EZ[®]-Clone PLUS is downloading data from the SNOOP in this process.

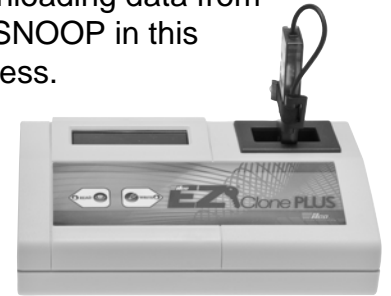

4

Insert Original Key, Press "Read". This is verification process.



5

Insert Ilco[®] EK3P, Press "Write".



6

Ilco[®] EK3P is now ready for cutting.



ilco
A Member of the Kaba Group

The **ilco** to your success