



Instructions for Replacing Bezels on Flex Series Lights

Thanks for choosing a KC HiLITES product. We take pride in building the highest quality, best engineered systems possible.

1. Insert the bezel tool (shown at right) into opposing slots on the bezel.
2. Turn counterclockwise to loosen.
3. After loosening, the bezel can be unscrewed by hand.
4. Do not remove the lens or other parts within the light.
5. Carefully begin threading the replacement bezel onto the light.
6. Using the tool, tighten the bezel using moderate pressure.



Repeat procedure for additional lights.