

WINDOW BELT MOLDING REMOVER

Quickly Removes All Window Belt Moldings.

Slide the powder coated tool downward between the window exterior and the door. The channel side of the tool should face the door. When the tool channel is below the belt molding, push or pull the tool upward. The tool quickly removes the belt molding without damage to the window or the molding.



Shop for other automotive tools on our website.