

Notes

- Fog light pigtails must be run to vehicle fog light power if compatible connections can be made with the included or attached clips.
- If the pigtails do not match the vehicle harness connectors, the pigtail connectors must be removed / stripped to expose red (power) and black (ground) wires so connections can be made to proper power and ground from the vehicle.
- RED ACC (+) cable powers the DRL and fog function and should be run to ACC power
- When power is supplied to the yellow wire (via switch, headlights on, etc.) the Lamp changes from DRL to Fog Function

