




Part # 92311


DELUXE ORIFICE TUBE SERVICE KIT

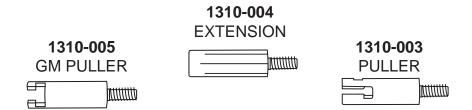

Orifice Tube Remover / Installer Set

Orifice Tube removal

- 1. Recover any refrigerant from system.
- **2.** Disconnect refrigerant line at the evaporator inlet and pour a small amount of refrigeration oil into the inlet for lubrication.
- 3. Screw the brass extension onto the Arbor.
- 4. Screw the correct end (GM / Ford) onto the extension.
- **5.** Back off the outer nut portion of the orifice tube remover / installer to the handle and insert the tip of the tool into the evaporator inlet.
- **6.** While exerting a slight downward pressure on the tool, rotate its handle until the tool drops down and locks onto the tangs on the orifice tube (see sketch below).
- **7.** Tighten the outer nut portion of the tool against the end of the evaporator inlet to remove the orifice tube.

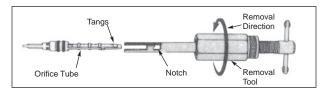

Orifice Tube installation

- 1. Pour a small amount of refrigerant oil into the evaporator inlet. Also, lubricate the o-rings on the new orifice tube.
- 2. Attach the new orifice tube to the orifice tube remover / installer, insert the assembly into the evaporator inlet, and push downward until the orifice tube is stopped by the dimples in the evaporator inlet line.
- **3.** Turn the tool handle 1/8 turn to release it, withdraw it from the inlet and reinstall the refrigerant line.

Broken Orifice Tube removal

- If a portion of the orifice tube has broken off, use the Auger point shaft to remove the assembly that remains in the evaporator inlet.
- **2.** Thread the screw tip portion of the tool into the metal tube in the center of the assembly and pull outward with a clockwise twisting motion.
- 3. If this fails, a special repair kit is available for some systems.
- ▲ WARNING: Cancer and Reproductive Harm.

92311 INST