


DYE/OIL INJECTORS

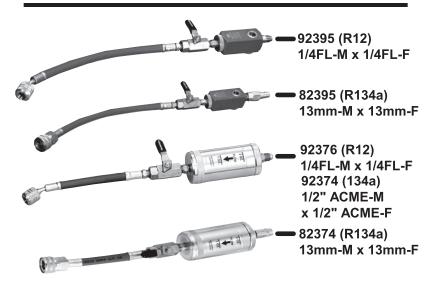

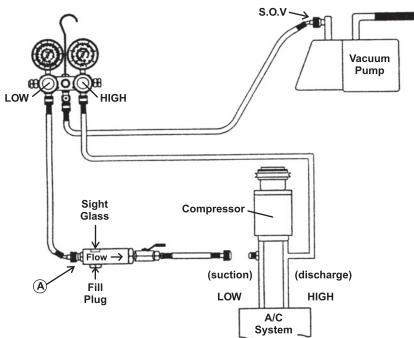

STEP 1 - VACUUM THE INJECTOR

- 1. Connect manifold Low Side hose to injector and open injector valve.
- 2. Connect the yellow manifold service hose to a vacuum hose.
- 3. Start the vacuum pump and open the Low Side valve.
- **4**. Close the lever on the injector and remove the Low Side hose from injector (point A).

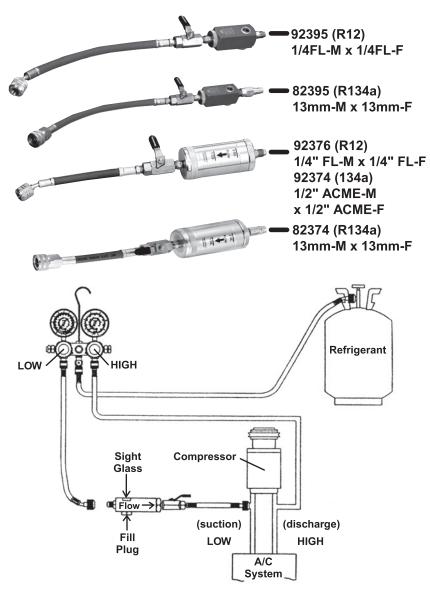

STEP 2 - ADDING REFRIGERANT TO THE INJECTOR

- 1. After vacuuming the injector, open the fill port and add the dye.
- 2. Close the fill port and connect the Low Side hose to the injector.
- 3. Connect a refrigerant supply to the yellow service hose.
- **4**. Connect the dye injector hose to the system Low Side.
- 5. Start the vechicle and run the A/C on High.
- **6.** Open the valve on the injector, the manifold Low Side, and refrigerant supply.
- 7. Add a small amount of refrigerant to the system.
- 8. Locate leaks using a UV Leak Detector.

92376-INST-UNIV