



THE AUTOMOTIVE LIGHTING BENCHMARK

2011-16 SUPER DUTY XB LED HEADLIGHTS INSTALL GUIDE

WARNING: By reading this document, you agree it is only to be used as an educational guide. Morimoto Lighting nor its dealers make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. If you are unable to clearly understand and adapt the information below, professional installation is recommended.

PACKAGE CONTENTS



2X HEADLIGHT ASSEMBLIES




1X FUSE TAP / DRL HARNESS

IMPORTANT: If your vehicle is equipped with anything but OEM turn signals (full assemblies, LED bulbs, or otherwise) in the tail lights or elsewhere: You may experience a hyper flash and/or problem with the sequential signal setting on these headlights. This is not a defect in the headlight, and caused by un-matched impedance with your original vehicle settings.

INSTALLATION PROCESS

1. Remove the four 10mm screws along the top of the grille assembly.

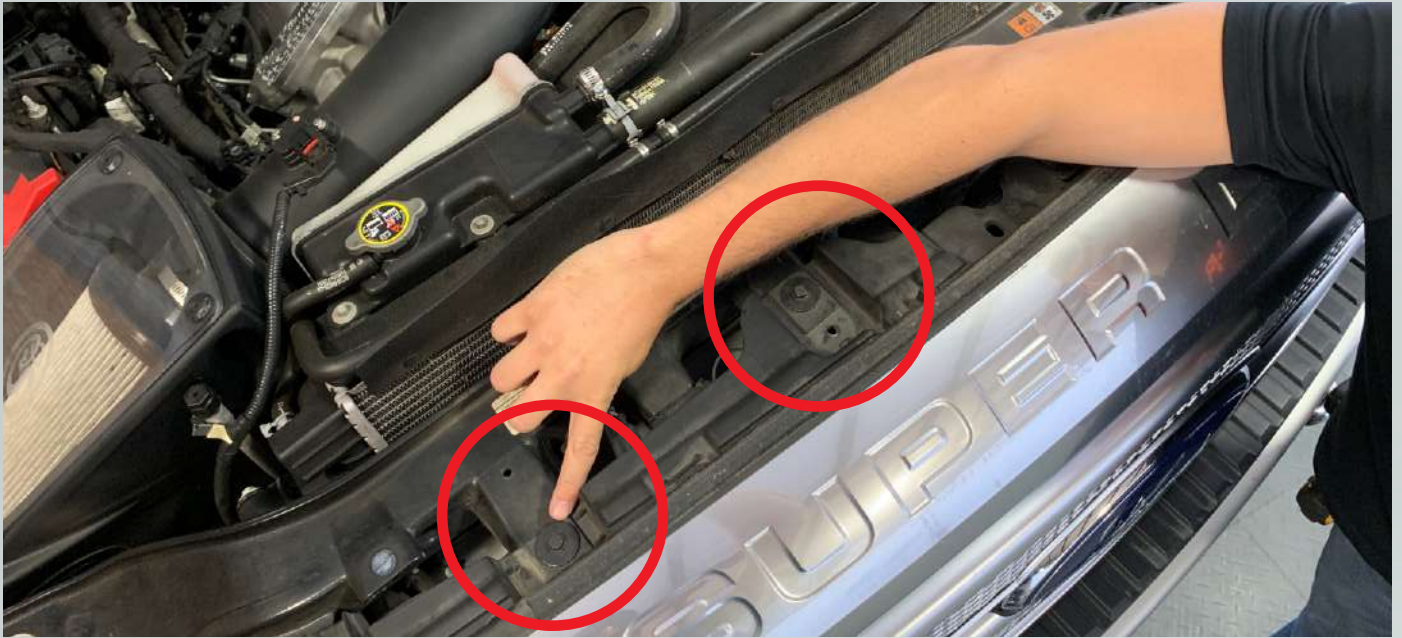

2. Use a long flat-head screwdriver to depress the five clips at the bottom of the grille shell to release it.






3. Remove the four 10mm screws that secure each headlight to the truck.



4. Remove the headlight and unplug the factory bulbs from each socket.



5. Route the DRL fuse tap harness across the radiator support panel.

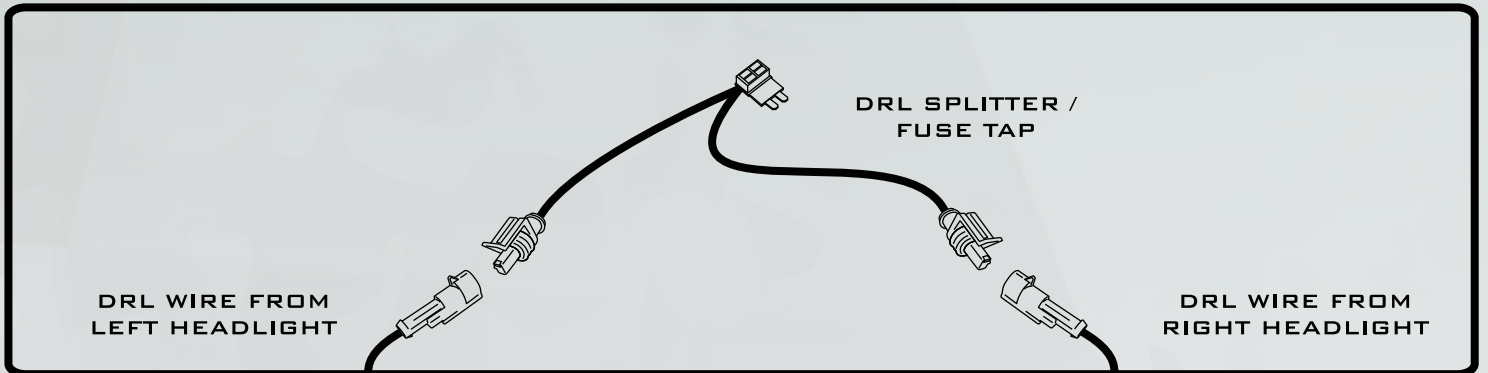

6. Connect fuse tap to the power mirror fuse (#50) indicated below:



7. Connect XB LED headlight to factory headlight connectors.



8. Configure turn signal function to your preference.

SEQUENTIAL TURN SIGNAL TOGGLE



SEQUENTIAL TURN SIGNAL OPERATION




STANDARD (BLINKING) TURN SIGNAL OPERATION

9. Installation of XB LED headlights is reverse of removal.

The vertical adjuster can be accessed from the top with the headlight installed.



10. Refer to the aiming standards below when adjusting your lights.

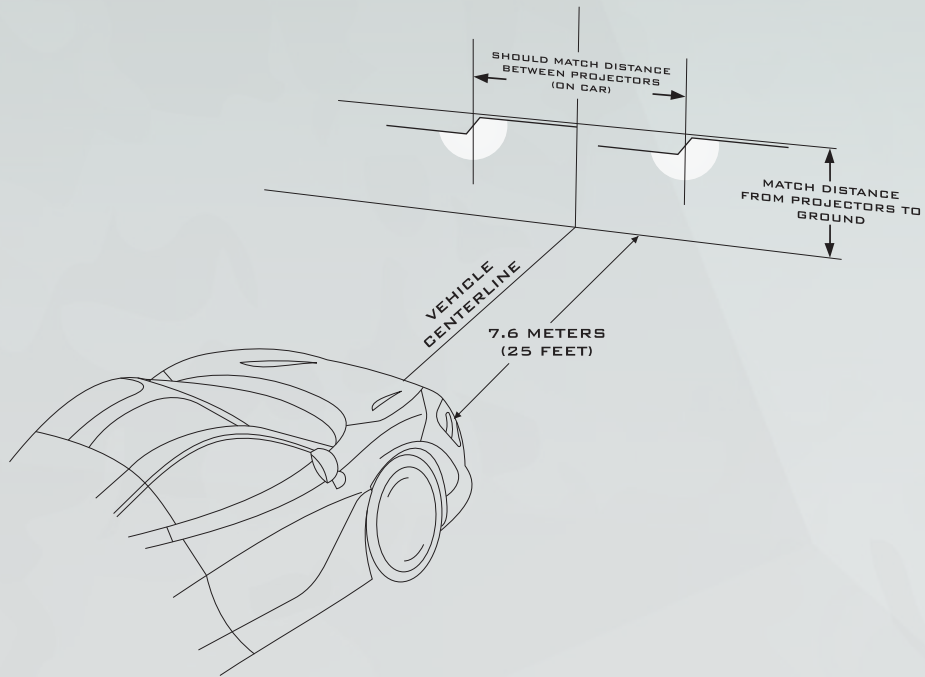

-END-