

INSTALL GUIDE


RGBAR LIGHT BAR

WARNING: By reading this document, I agree it is only to be used as an educational guide. Profile Performance nor its distributors make guarantees on any finished results, nor are they to be held responsible for any damage, misuse, or personal injuries. Use at your own risk. If you are unable to clearly understand and adapt the information below, professional installation is recommended.



ASSEMBLY PROCESS


Due to the variety of mounting options available, recommended installation methods vary greatly. The RGBAR includes sufficient hardware for most installation types and the allen keys to fit all included bolt heads.

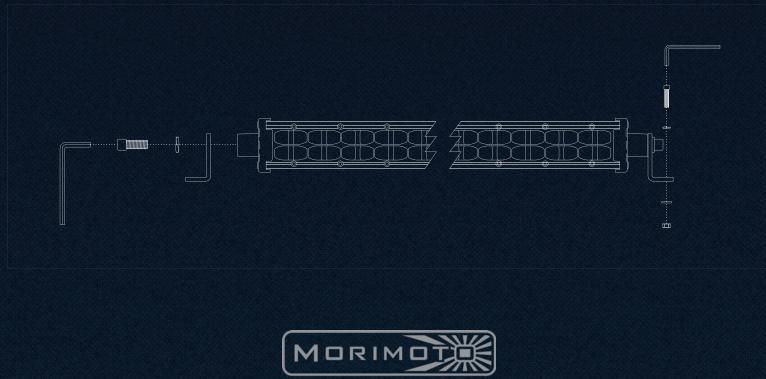

THE AUTOMOTIVE LIGHTING BENCHMARK

WIRING PROCESS

The input of the RGBAR is a standard Deutsch DT connector. Additionally, a 4-pin male JST style connector is used for powering of, and control of, the RGB accent lighting of the RGBAR. The driver for the LED accents is internal to the bar, so the input can be plugged directly into the 4-pin RGB controller of choice. We strongly recommend the Morimoto XBT controller.

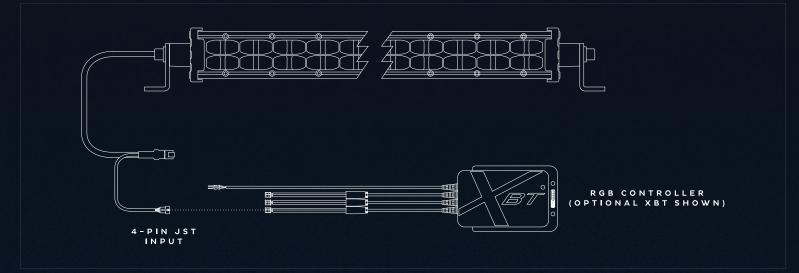

- E N D -

