



Installation Instructions

ProCoil HEI
P/N 72355 & 72356

INSTALLATION:

1. Disconnect the vehicle's wiring harness connectors from the distributor cap.

2. Remove the spark plug wire retainer (if so equipped).

3. Remove the coil cover screws (A) and the coil cover (B). *Note: Before removing the old coil, make sure the new coil has the same color wires as the old coil (RED & YELLOW wires for P/N 72355 and RED & WHITE wires for P/N 72356).*

4. Remove the 4 coil screws (C).

5. Using a screwdriver, push the coil wire spade terminals up out of distributor cap.

6. Remove the coil (D) from the distributor cap.

7. Remove the ground wire or strap (H), remove the silicone washer (E), the contact brush and assembly (F).

8. Clean the coil mounting area of the distributor cap and lube both sides of the new silicone washer with dielectric grease before installing new coil.

Note: Always use a new silicone washer and contact brush when installing a new HEI Coil.

9. Reverse steps 1-7 to install the new coil.

