


## VALVE CORE TOOL



# 437 001

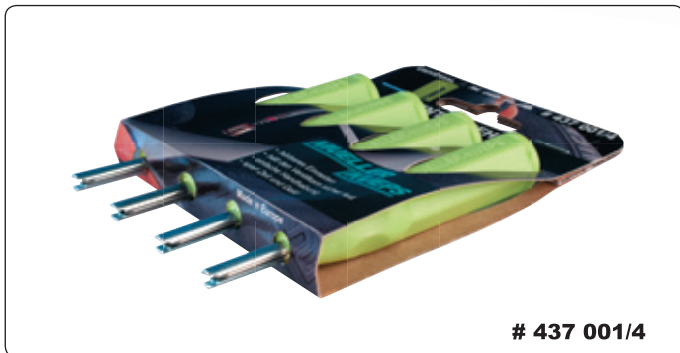

# 437 001/4

- Insert the Tool into the valve stem.
- Tool will "click" when properly connected to core.
- Upon removing the core, tool will retain the core.
- Easily and quickly replace the core.

- For one handed operation.

**# 437 001 Valve Core Tool**  
with valve core holder

**# 437 001/4 Valve Core Tool, 4pcs**  
with valve core holder



# 437 001/4