

De-Fuser (Double)

Installation Instructions



The De-Fuser is a product made to prevent the need to remove and re-install fuses in vehicles that require a fuse to be removed for towing. After this product is installed you'll only need to press a switch.

(Figure 1)

Installing the De-Fuser

You will need a fuse puller and a drill with a 13/16 inch bit for this install.

- 1. Find out which fuse you need to pull for towing from your vehicle owners manual or call a dealership.
- 2. Remove the fuse panel cover and the appropriate fuses. **Do not** insert the fuses into the De-Fuser yet, to prevent the risk of blowing the fuses.
- 3. Push one of the male spades from the bottom of the De-Fuser into one side of the fuse socket you just removed the fuse from. Remember to keep the red side and the black side separate when inserting the male spades. Look at (Figure 4) on back to determine which fuse socket is the red side and the black side. Push the other male spade into the other side making sure the two do not touch each other. Each spade will work on either side of the fuse socket making it impossible to install the De-Fuser backwards. The switch is simply opening or closing the circuit so polarity is not a factor. (Figure 1)
- **4.** Locate a mounting surface for the De-Fuser switch such as the fuse panel cover. The fuse panel cover is a good choice to install the switch because it is close to the fuse box and there is usually no wiring or metal directly behind the cover. Also if you ever sell your vehicle and the new owner does not want to tow they can always replace a fuse panel cover.
- 5. Make sure the De-Fuser switch reaches the location you chose to install it. Drill a 13/16" hole where you chose to install the switch.
- **6.** Remove the De-Fuser switch (**Figure 2**) from the wires by pulling on the female spades connected to the bottom of the switch. You may need to wiggle the spades back and forth to help slide them off.
- 7. Now push the switch into the drilled hole.
- 8. Re-connect the De-Fuser wires to the switch by sliding the female spades onto the switch connectors. (Figure 5) Back page. Make sure when sliding the spades onto the switch you follow Figure 5 for alignment.
- 9. Install the fuses you removed into the fuse holder on the De-Fuser (Figure 3). If you removed an ATM micro fuse you will need to install an ATM mini fuse of the same amperage in the De-Fuser. Be sure to use the same amperage fuse to prevent damage to your vehicle.

Replace fuse cover panel to complete installation.

(IMPORTANT) Press the De-Fuser switch in for normal driving and let it out for towing position.


NSA RV Products Inc. cannot be held liable for any misuse or improper installment of it's products.



(Figure 2)



(Figure 3)

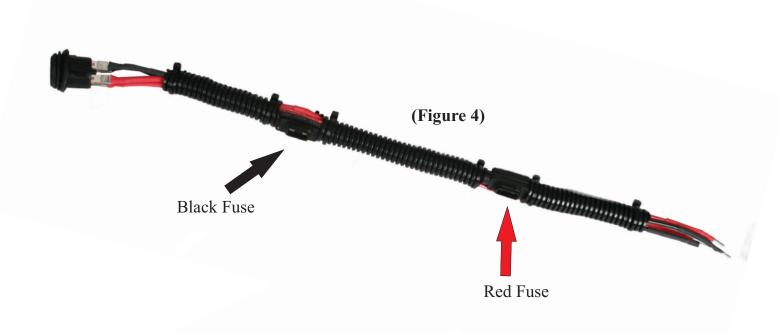



Put Red wires on one side and Black wires on the other side of plastic divider