

Serpentine Belt Tool 27115



Serpentine Belt Tool

This tool is configured with a 3/8" square drive, a 9" extension with 1/2" square drive, four sockets, and three crowfoot wrenches which give it the flexibility to aid in the removal and installation of most Serpentine belts.

27115

Locate your belt tensioner and determine which of the adapters will be needed to drive the tensioner.
Insert tool into tensioner and force tensioner away from the belt relieving pressure on the belt.

3. You will now be able to remove belt from pulleys.

4. Install new belt following the exact path of old.

5. Release tensioner slowly allowing it to tighten against belt

6. Check belt to make sure it is resting securely on all pulleys.

Allows user to access the belt tensioner during removal and installation of Serpentine Belts when space is limited.

Caution: Always wear safety glasses