

Bearing Race and Seal Driver Set

27119



27119

Bearing Race and Seal Driver Set

- 1. Carefully match installer cone to the bearing race you are installing.
- 2. Using a mallet tap the race into place making sure the bearing race is fully seated.
- 3. Do the same for the bearing grease seal.
- Used to install most standard wheel bearing races and seals.

Caution: Always wear safety glasses