



## Operating Instructions

### ⚠️ WARNING

- Read, understand, and follow all printed materials provided with and on this pan before use.
- This pan is to be used only in conjunction with Blackhawk Engine Stand model 30750, 31250, 31252 or 31256.
- Do not expose to fire or high temperature.
- Dispose of hydraulic fluid in accordance with federal, state and local regulation.
- Spilled engine fluids can create slippery floor conditions. Clean up spills immediately.
- Failure to heed these marking may result in personal injury and/or property damage.

**Note:** This product is designed to be used in conjunction with Blackhawk Engine Stands Model 30750, 31250, 31252 & 31256 only.

**Assembly** (refer to Figure 1)

- Insert both rubber plugs into the drain holes from bottom to top.
- For model 31250, attached the braces to the pan with bolts and nuts provided.

**Operation**

- Place the pan onto the base of your engine stand referring to Figure 2.
- Drain oil into an approved container and dispose of oil in accordance with federal, state, and local regulations.

**Replacement Parts**

Refer to Figure 1 and table below, call or write for current pricing.

| No. | Description                     | Part No.             | Qty |
|-----|---------------------------------|----------------------|-----|
| 1   | Oil Pan                         | N/A                  | 1   |
| 2   | Rubber Plug                     | 6448K65              | 2   |
| 3   | Brace                           | included and         | 2   |
| 4   | Bolt, 1/4"-20 x 3/4"L           | available only as    | 2   |
| 5   | Hex Nut, 1/4"-20                | part of Hardware Kit | 2   |
| 6   | Hardware Kit (includes No. 2~5) | 30001B               | -   |

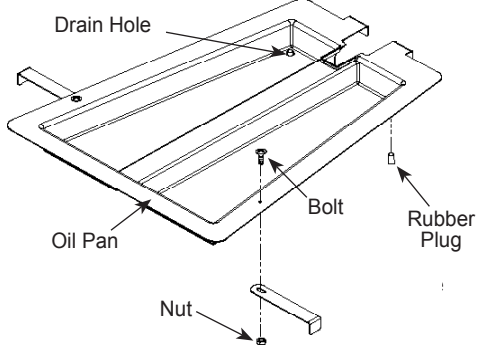


Figure 1 - Oil Drip Pan Illustration.

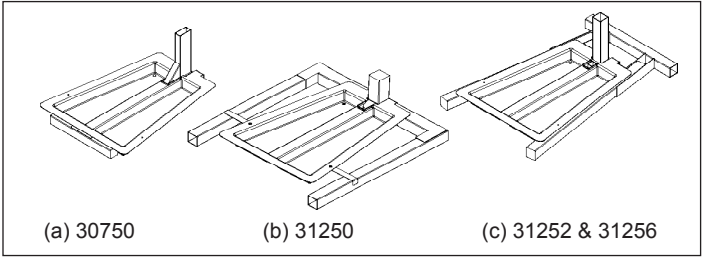


Figure 2 - Application Illustration on different models