



ORACLE LIGHTING








OCULUS FOR BRONCO

ORACLE PART #5886

HEADLIGHT ASSEMBLY GUIDE

TOOLS NEEDED:
PHILLIPS HEAD SCREWDRIVER
8MM NUT DRIVER

OCULUS DIAGRAM

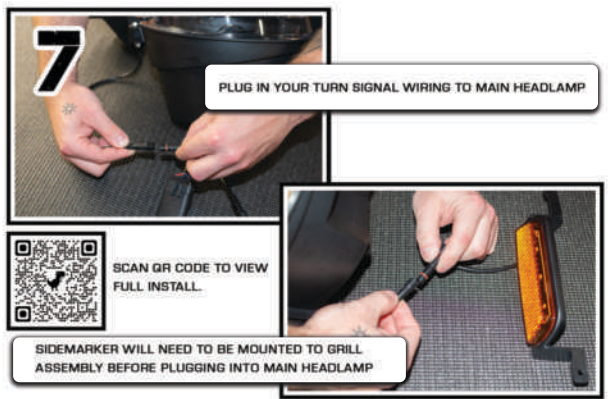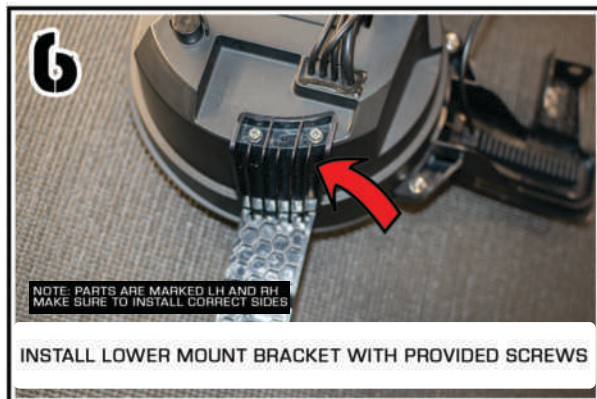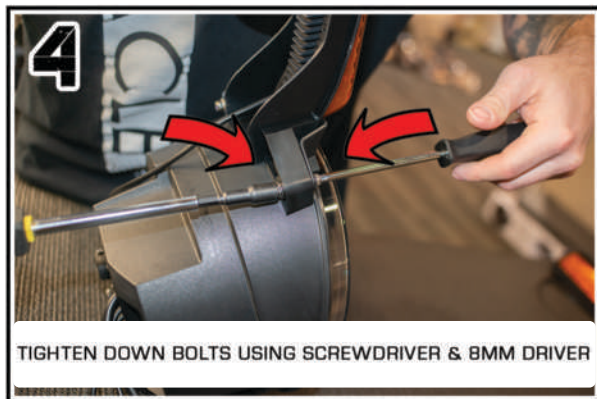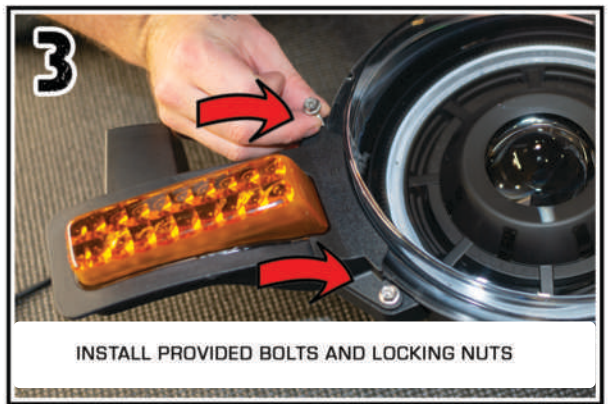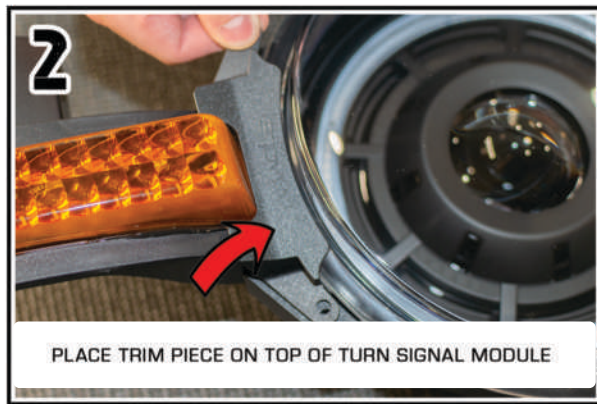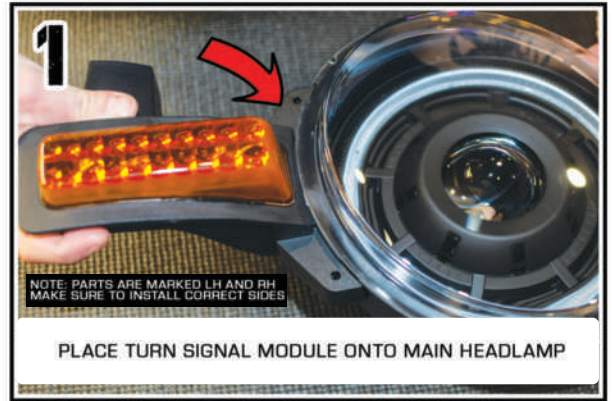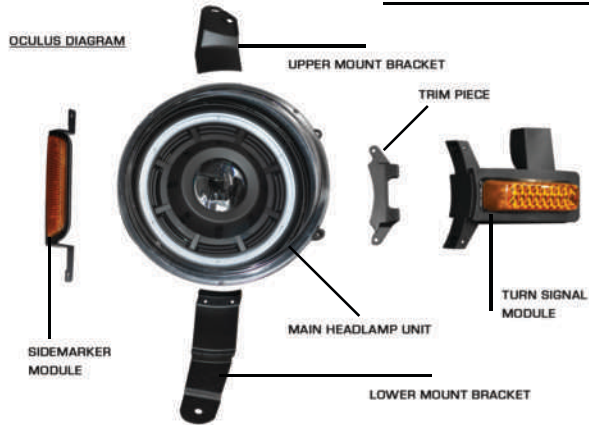

OCULUS

HEATED LENS SUPPLEMENTAL GUIDE


1) WATCH THE DIY INSTALLATION VIDEO GUIDE:



WATCH
THE
VIDEO:


You Tube

[YOUTUBE.COM/WATCH?V=FTTEPXTBMMC](https://www.youtube.com/watch?v=FTTEPXTBMMC)

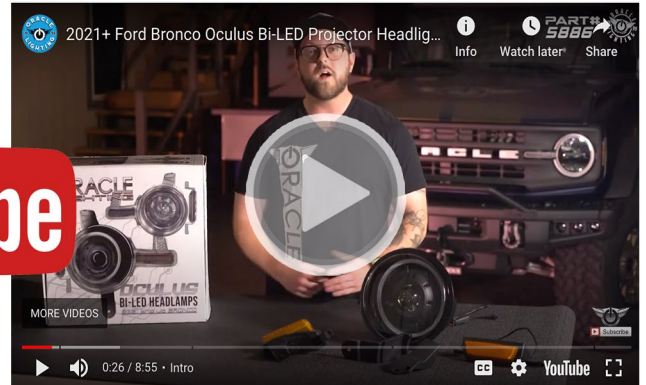

2) WIRING INFO:

Because the headlight heating element needs power the heater positive cables from the headlights need to be connected to the fuse box using the included Add-A-Circuit to get power. (Fuse Position F66)

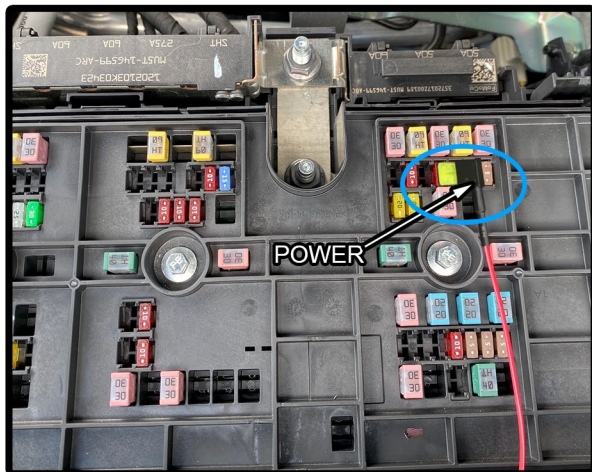


The output wire has a blue butt connector that crimps to both RH/LH power wires.

Fuse Powers the Heater.
If the heater is not active
check this fuse.

The original fuse goes into this
location. A spare fuse is
shipped in this location.

Connect this back into the
original fuse position.

Add-A-Circuit

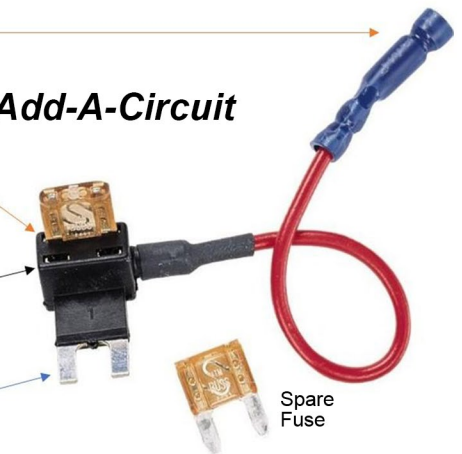

3) MOUNT THE TEMPERATURE SENSOR:

Start by connecting the sensors to the headlight cable with the Plug-&-Play connector (A). Mount the

sensor in this location (B) so that it is away from any heat source and can get a good read on the ambient temperature. First clean the surface with alcohol and secure any extra cables. Repeat on both sides RH and LH Headlights.

