

---

## HEAVY-DUTY BRAKE SPRING TOOL



**CAUTION:** To prevent personal injury, wear eye protection that meets ANSI Z87.1 and OSHA standards.

### Brake Spring Removal

1. Position the bar end of the tool under the axle tube and hook the spring loop in the tool tab.
2. Push down and outward on the tool handle until the spring loop can be removed from the brake shoe.

### Brake Spring Installation

1. Position the bar end of the tool under the axle tube and hook the spring loop in the tool tab.
2. Push down and inward on the tool handle until the spring loop can be attached to the brake shoe.

