



**PYLE<sup>®</sup>**  
**view**

**Users Manual**


**PLVWR1440**

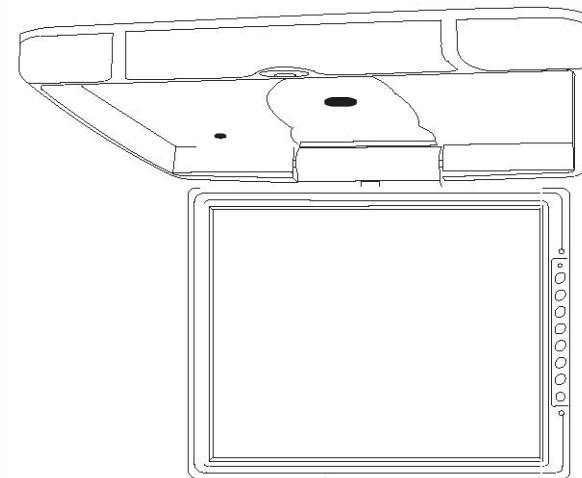

**14" High Resolution TFT Roof Mount Monitor**

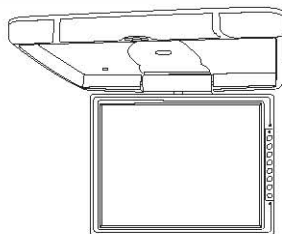


## Wiring diagram

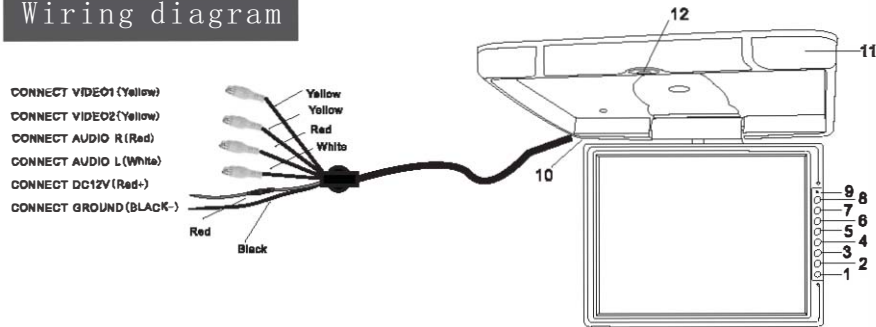

## Key functions

- |                                   |                            |
|-----------------------------------|----------------------------|
| 1.Remote control                  | 2.RESET                    |
| 3.-                               | 4.MENU                     |
| 5.+                               | 6.AV2                      |
| 7.AV1                             | 8 .POWER                   |
| 9.LED                             | 10.LIGHT SWITCH            |
| 11.IR wireless transmitter module | 12 .Monitor release button |

## Remote control

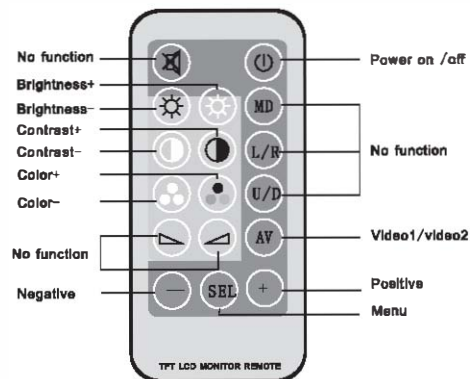

## Specifications

**Type:** TFT LCD  
**Pixs:**1024\*768  
**Display Format:** 4:3  
**Power Supply:** DC 12V  
**Dual Video Input**  
**L/R Audio Input**  
**System:** PAL/NTSC  
**Built-in IR transmitter**  
**Built-in Dome lamp**  
**Storage Temperature:** -10 °C ~ +60 °C  
**Power source/Consumption:**DC12V+/-20%,≤15W

## Monitor installati

- 1.First of all,unscrew the four screws on the mounting plate connected to the unit and take off the mounting plate.
- 2.Fixup the mounting plate on the suitable position if the vehicle with four screws.
- 3.Then install the unit with four screws on the mounting plate to fix the unit.

