

# Instruction Sheet

**Product: 6 Switch Ignition Panels**  
50-163, 50-164, 50-165, 50-166, 50-863,  
50-864, 50-865, 50-866, 50-7164



## **6 Switch Ignition Panel Installation Instructions**

- Large Red wire goes to the large post, battery side of the solenoid, OR to the battery disconnect switch.
- Small Red wire goes to the "S" post, small post of the solenoid.

### **For Panels With Fuses:**

- Connect power wire going to accessory to the blue spade connector coming out of the top of the fuse holder.
- Panel takes ATC style spade fuses.

### **For Panels Without Fuses:**

- Connect power wire going to accessory to the top screw on the switch you would like to use to turn the accessory on.

### **For Panels With Lights:**

- Connect the wire coming off the light to a ground. The other wire will already be connected to the switch for power. All light wires will need to be grounded. A common place to ground the light is the mounting hole on the corners of the panel.