

4X4 SPINDLE PULLER

This part should only be installed by personnel who have the necessary skill, training and tools to do the job correctly and safely. Incorrect installation can result in personal injury, vehicle damage and / or loss of vehicle control.

- Fits all common 4WD pick-up spindles
 - With the new stepped design, this one tool will allow you to pull spindles from vehicles that are equipped with 1-1/2", 1-5/8" or 2" spindles
-

1. After removing the brake and rotor assembly, install the **#85796** puller on the spindle by threading the tool onto the spindle.
 2. Using the bolt that comes equipped with the puller, tighten against the end of the axle to remove those stuck or hard to remove spindles without damaging the spindle or axle.
-

A **#499** flange axle puller may also be used by removing the bolt and installing the **#499** slide puller.

CAUTION: DO NOT USE WITH IMPACT WRENCHES (AIR TOOLS)



**Specialty
Products
Company**®