

## Installation procedures

### Filler neck


It was brought to our attention that fuel leaks may occur after the filler neck replacement caused by rust build-up at the quick connects fittings. To correct this situation we supply two seals.

When removing the filler neck, it is possible for the inner plastic insert to be stuck to the vent tube as shown in **illustration 1**. Carefully remove the insert from the vent tube and install in the quick connector.

The seals must be installed in the groove found inside the quick connector as shown in **illustration 2**.

**NOTE: It is possible that your filler neck is equipped with two vent tubes quick connectors. Make sure to install both seals to the quick connectors.**

Filler neck

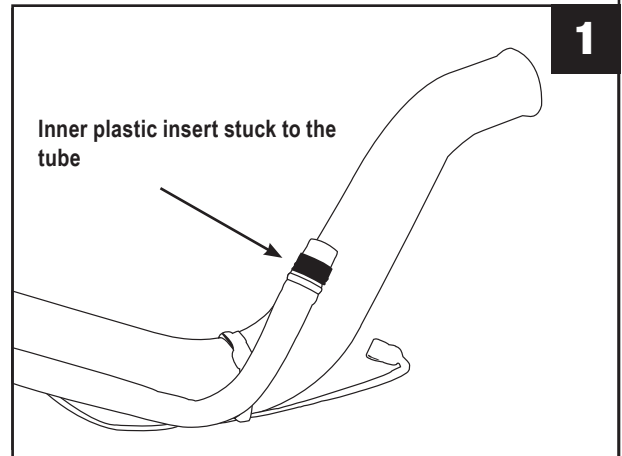

Quick connector

