

ITEM.	T42002	T43002	T46002	T412002
Min Height	10 ³ / ₄ "	11 ¹ / ₂ "	15 ¹ / ₄ "	18 ³ / ₁₆ "
Max Height	16 ³ / ₄ "	16 ¹ / ₄ "	23 ¹³ / ₁₆ "	28 ¹ / ₂ "



INSTRUCTIONS FOR USE

**HEAVY DUTY JACK STANDS
RATCHET TYPE**



**2-TON CAPACITY, RATCHET TYPE
2 TONELADAS DE CAPACIDAD,
TIPO TRINQUETE**



**6-TON CAPACITY, RATCHET TYPE
6 TONELADAS DE CAPACIDAD,
TIPO TRINQUETE**



WARNING: Do not overload jack stands beyond rated capacity. Overloading can cause damage to jack stands and/or failure resulting in personal injury or property damage. Always center the load on saddle of jack stand. Always use jack stands in pairs on hard, level surfaces capable of sustaining the load. Use on other than hard surfaces can result in jack stand instability and possible loss of load.

Operation:

- (1) Refer to your vehicle owner's manual for proper jacking procedures. Lift only on areas of the vehicle as specified by vehicle manufacturer.
- (2) Position jack stands under vehicle at points specified by vehicle manufacturer as proper load support points.
- (3) To adjust jack stands: Hold control lever up while lifting saddle shaft to desired height. Push control lever down to lock pawl into teeth located in center column. Make sure pawl is fully engaged into teeth.
- (4) Carefully lower load onto jack stands.

Maintenance and inspection:

- (1) Visual inspection should be made before each use of the jack stands, checking for cracks, cracked welds, and missing and/or damaged parts. Any jack stand that appears to be damaged in any way must be removed from service immediately.
- (2) Because of the potential hazards associated with the misuse of equipment of this type, no modifications should be made to the product.

