4-LED LIGHTHEAD (12-24 VDC)

WIRING

- RED: To +VDC (fuse @ 3A)
- BLACK: To Chassis Ground
- WHITE: For steady burn, apply +VDC
- YELLOW: For Synchronization:

Connect YELLOW wires of all heads together for synchronization (all heads must be set at the same pattern)

- For Simultaneous or Alternating Flash:
 - Apply +VDC to RED and YELLOW wires simultaneously to enter Grouping; lighthead will display short (single or double) flashes:
 - Single flash = Group1
 Double flash = Group2
 - 2. Momentarily apply +VDC to YELLOW wire to change Groups:
 - · Heads in the same Group flash together.
 - · Group1 Heads alternate with Group2 Heads.
- For Flash Patterns:

Momentarily apply +VDC to YELLOW wire:

- · once for next pattern
- · quickly three times for pattern (

FLASH PATTERN

- 0 Random
- 1 Single (split)
- 2 Double (split)
- 3 Quad (split)
- 4 Quint (split)
- 5 Mega (split)
- 6 Ultra (split)
- 7 Single-Quad (split)
- 8 Single H/L (split)
- 9 Single (all)

- 10 Double (all)
- 11 Quad (all)
- 12 Quint (all)
- 13 Mega (all)
- 14 Ultra (all)
- 15 Single-Quad (all)
- 16 Single H/L (all)
- 17 Steady (ca)
- 18 Steady 4 (all)

Note: This unit is not factory set at pattern 0

Find more United Pacific products on our website.

Learn more about emergency and warning lighting we have.