

INSTALLATION INSTRUCTIONS

MODEL 804-LV

1. Using the screws provided mount the electric valve inside the vehicle in a dry location.


2. Connect the 1/4" air hoses to the electric valve as shown in Fig. 1.

NOTE: To avoid air leaks do not over tighten the air hose compression fittings.

IMPORTANT: Air supply must be in direction of arrow.

3. Wire the electric valve as follows:

- Connect to one of the terminals (+) 12 volts battery, alternator, etc. Protect this circuit with a 3 amp fuse. (Fuse not included).
- Connect the other terminal of the electric valve to the horn switch.
- Connect a wire to the other horn switch terminal and ground under any metal body bolt that is clean of paint and rust. Fig. 1.

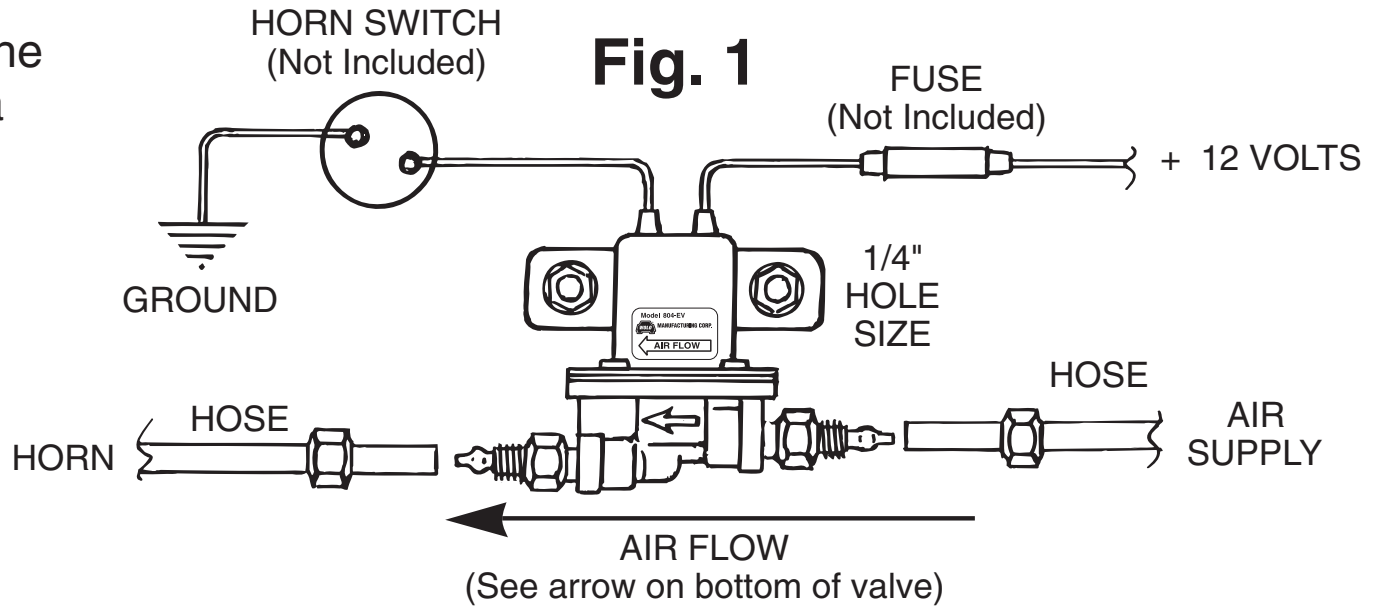

MANUFACTURING CORP.

Discover other automotive horns on our website.