



Mounting Instructions

Our Elite Series LED Bulbs have been precisely designed to be a direct replacement for their halogen counterparts utilizing the same plugs and sockets to meet industry standards. Installation is just as replacing a halogen bulb and should not require any modification to the plugs or sockets in *most* applications.

1. **Unplug and remove halogen bulb:** Carefully unplug and remove the halogen bulb from the headlight housing. In some applications, it may be required to remove a plastic dust cover to gain access to the headlight bulb.
2. **Install LED bulb:** Replace the halogen bulb with new LED bulb. In some applications where retaining clips are used, it may be easiest to remove the collar from the bulb and install separately. Simply twist the collar on the bulb counter-clockwise and remove the collar. After the collar is installed, reinsert the bulb into the collar and twist clockwise to lock into place.
3. **Install LED driver:** Plug the LED driver into the LED bulb. Screw the plugs together to lock into place. Plug the other end of the LED driver into the factory headlight plug. Tuck LED driver away.
4. If applicable, reinstall plastic dust cover or rubber grommets that were removed during install.

Input Voltage	Max Power Output
9-32V DC	32 watt