


3910


SURFACE MOUNT 3" X 5" LED HEAD

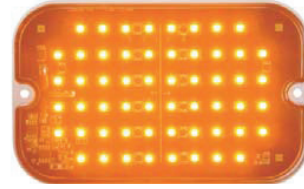

TECHNICAL SPECIFICATIONS

| | |
|----------------------|-----------------------------|
| INPUT VOLTAGE | 12.8 Vdc |
| INPUT CURRENT | 0.4 Amps Typical |
| | 0.8 Amps Max |
| | (varies with flash pattern) |
| LED ELEMENTS | 56 |
| FLASH PATTERNS | 15 |

DIMENSIONS

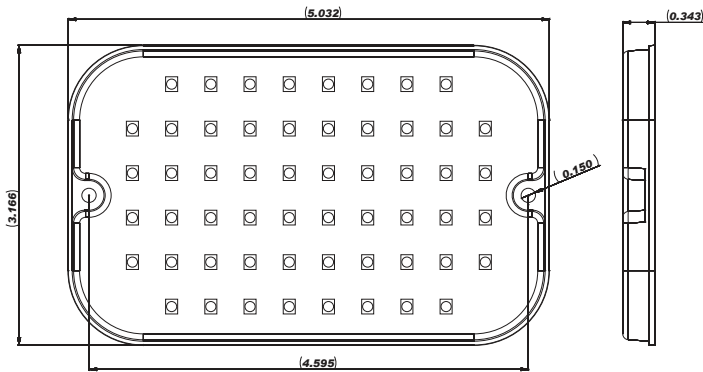

INSTALLING THE 3910

1. Use the MOUNTING DIAGRAM for reference to mark the hole locations for the two mounting screws and the wires. Drill 7/64" pilot holes for the mounting screws and a 1/2" hole for the wires.
2. Make Electrical Connections: *Wiring diagrams on back*

THE WIRE CONNECTIONS MUST BE SEALED IF USED IN A WET LOCATION. WATER MAY TRAVEL UP AN UN-SEALED WIRE AND CAUSE CORROSION PROBLEMS.

USE AT LEAST 18AWG WIRE FOR POWER CONNECTIONS

RED Wire: Connect to +12V through an ON/OFF switch. The use of a fuse located close to the voltage source is recommended.

BLACK Wire: Connect to - GROUND *vehicle chassis*.


BLUE Wire: Flash Pattern Selection.

Turn the power on. Touch the BLUE wire to +12V (RED wire) to advance to the next pattern. When you have found the flash pattern you wish to use, either leave the BLUE wire unconnected (SEAL THE END) or connect to GROUND (BLACK WIRE).

See flash pattern list on next page

3. Mount the 3910 with the two #6x1/2" stainless steel screws (supplied). *NOTE: The 3910 should not be mounted to an extremely curved surface.*


MOUNTING DIAGRAM

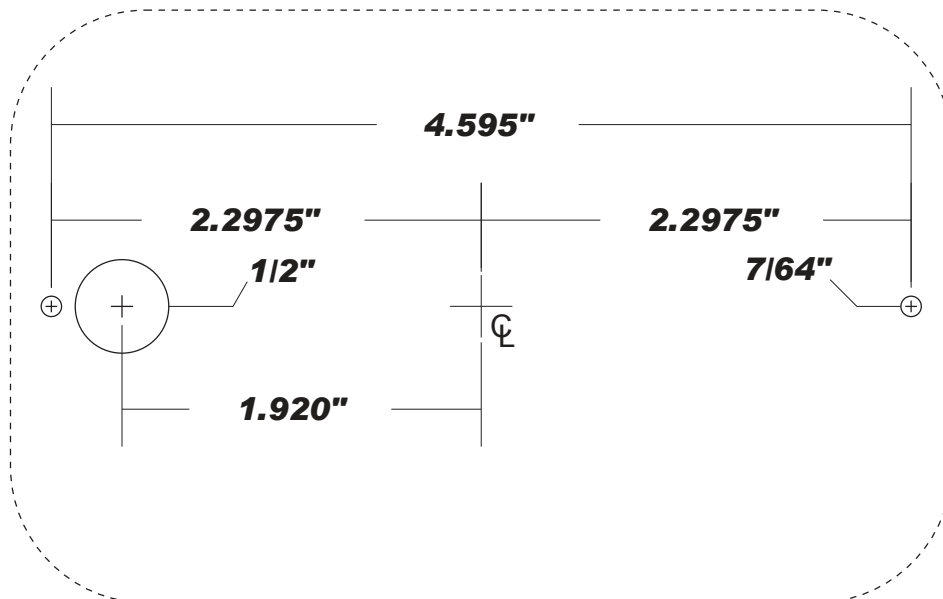

FOR REFERENCE ONLY
MEASURE BEFORE DRILLING


WIRING DIAGRAM 1

BASIC WIRING WITH SIMPLE ON/OFF SWITCH

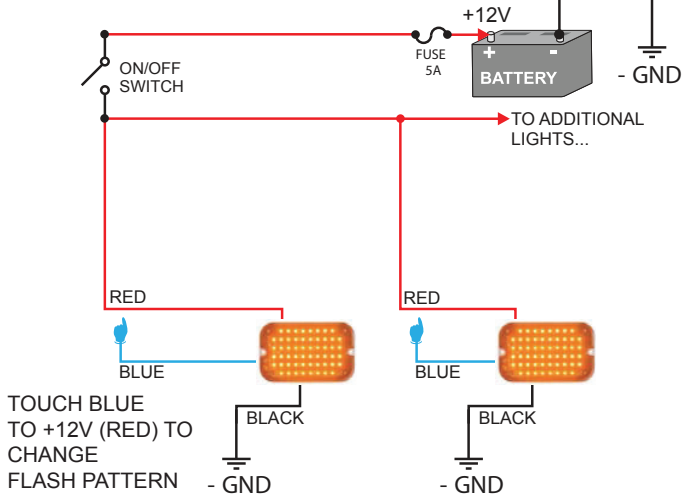

WIRING DIAGRAM 2

ON/OFF AND FLASH PATTERN SELECTION

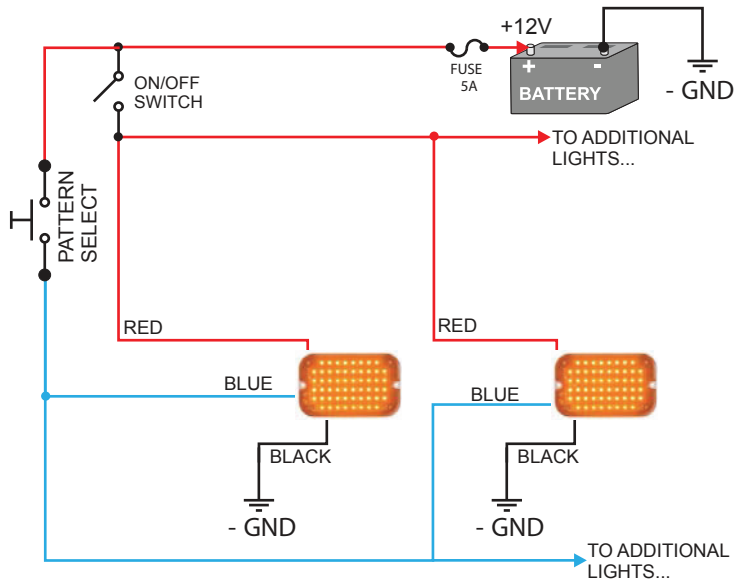

PATTERN SELECT SWITCH IS A MOMENTARY, NORMALLY OFF, PUSH-BUTTON SWITCH.

PRESSING PATTERN SELECT WILL INCREMENT THE FLASH PATTERN.


PRESS AND HOLD PATTERN SELECT WHILE TURNING THE POWER SWITCH ON TO RESET FLASH PATTERN TO #1.

CONNECTION TO FLASHER

The 3910 can be driven by any lamp flasher or LED flasher that is made to drive +12 Volt lamps or LED heads.

SET THE 3910 TO PATTERN 1
STEADY ON
WEHN USING WITH FLASHER


The easiest way to set the 3910 to steady on mode is to temporarily twist BLUE and RED together and apply power. Then, tie BLUE to the BLACK wire to ensure that the flash pattern will never change from steady on mode.

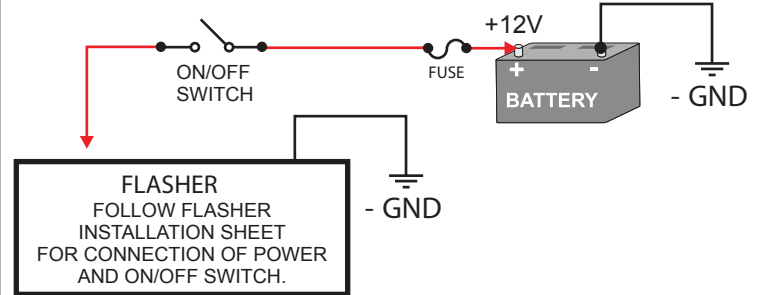

CONNECT BLUE TO BLACK WIRE ONLY AFTER SETTING THE HEADS TO STEADY ON MODE.

SEALING WIRE CONNECTIONS

ELECTRICAL TAPE WILL NOT SEAL A CONNECTION

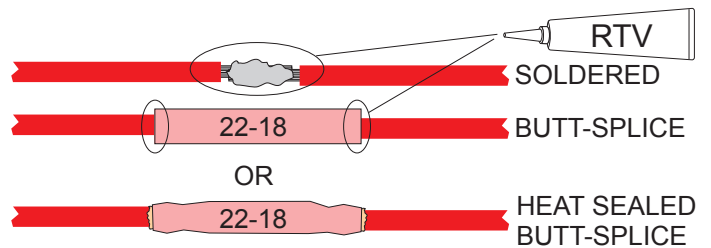

FLASH PATTERN LIST

| # | Flash Pattern | Description |
|----|----------------------------|---------------------------------------------------------------------------------|
| 1 | Steady ON | All LEDs on. FOR USE WITH EXTERNAL FLASHER ONLY. |
| 2 | RANDOM | Randomly selects from patterns 3 through 13 and runs each pattern 10 times. |
| 3 | Double Flash - SPLIT | 2 Flash Bursts Alternating between split LED array. 115 Double FPM. |
| 4 | Quad Flash - SPLIT | 4 Flash Bursts Alternating between split LED array. 140 Quad FPM. |
| 5 | Mega Flash - SPLIT | 1 Flash Burst Alternating between split LED array. 500 FPM. |
| 6 | Phased Mega - SPLIT | 1 Flash Burst Alternating between split LED array. Varies from 360 to 1200 FPM. |
| 7 | Deciblast - SPLIT | 10 Flash Bursts Alternating between split LED array. 170 Deci FPM. |
| 8 | Double Flash | 2 Flash Bursts. All LEDs firing, 115 Double Flashes Per Minute. |
| 9 | Quad Flash | 4 Flash Bursts. All LEDs firing. 140 Quad Flashes Per Minute. |
| 10 | Mega Flash | 1 Flash Burst. All LEDs firing. 500 Flashes Per Minute. |
| 11 | Phased Mega | 1 Flash Burst. All LEDs firing. Varies from 360 to 1200 Flashes Per Minute. |
| 12 | Deciblast | 10 Flash Bursts. All LEDs firing. 170 Deci Flashes Per Minute. |
| 13 | Flasher - SPLIT | Wig-Wag Flasher pattern split across LED array. 3 Flashes per second rate. |
| 14 | Flasher Sequence 1 - SPLIT | Wig-Wag and Steady Flasher sequence 1. 3 Flashes per second rate. |
| 15 | Flasher Sequence 2 - SPLIT | Wig-Wag and Steady Flasher sequence 2. 3 Flashes per second rate. |

Patterns 3 through 7 and 13 through 15 split the LED array into two halves

The remaining patterns flash the entire LED array.

RANDOM mode picks from both split and full array flash patterns.

