



THE DEPUTY® ELECTRONIC SIREN & PA SYSTEM Model 4100



Your purchase of a Wolo electronic siren, THE DEPUTY, is the perfect choice for reliable service. THE DEPUTY is manufactured with the finest materials and each siren is tested to meet our high standards, ensuring a perfect working siren controller. Wolo's quality workmanship and components are your assurance that this product will provide years of dependable service. If you need help with installation or in using your new Wolo siren, our technicians are available to answer your questions, Monday thru Friday, from 9 AM to 4 PM EST at 1-888-550-4676.

Before installation of the siren is attempted, it is important to read these instructions completely. The lives of people are dependent on the proper installation of this product. The person installing this siren must have advanced knowledge of the proper method for installation of safety warning equipment, connecting and securing wires to a vehicle's electrical system and knowledge of the vehicle's electrical system. Again, read this manual completely and note any messages marked "**IMPORTANT**" or "**WARNING**". A safe installation will prevent serious injury or damage to the vehicle.

Sound Hazard

IMPORTANT: This siren, like all effective sirens, produce a powerful audible sound which could cause permanent hearing loss. **Note:** Hearing loss can occur from short exposure to very loud sounds and or long exposure to moderate loud sounds. To protect your hearing and the hearing of others in or close proximity to the emergency vehicle using this siren, always use proper ear protection. Refer to federal, state, local municipality regulations and OSHA Standard 1910.95 for guidelines of "Permissible Noise Exposure"

INSTALLATION RECOMMENDATIONS

- For maximum sound be sure that the speaker connected to THE DEPUTY siren controller is not less than 100 watts. Recommended Wolo speakers are: Models 4002 or 4003
- The speaker should be mounted facing forward on the vehicle. To obtain maximum sound output, make sure that the speaker is unobstructed. The siren's sound can be severely reduced if objects are in front or blocking the speaker.
- **IMPORTANT:** Installation of siren controller and wire routing must be out of the deployment path of vehicles air bags.
- The siren controller must be installed in a location that will ensure safe operation of the controls and microphone.
- The siren's controller must be mounted in a location that will provide good ventilation. Never install siren controller close to a vehicle's heater duct.
- Before drilling any surface for mounting of the siren controller or for routing wires, carefully inspect the desired location to ensure that there are no components, wires and or any other vehicle part that could be damaged by drilling.
- Before connecting the siren controller to the vehicle, carefully review the vehicle's shop or build manual to ensure the connection point will not affect the circuit or the vehicle's operation.
- Speaker impedance: 6 to 8 ohms / 100 watt

IMPORTANT: Failure to follow all safety precautions and installation procedures outlined in these instructions could result in property damage to the vehicle, serious injury or death to you or others.

MOUNTING SIREN CONTROLLER Fig. 1

1. **IMPORTANT:** Do not connect the siren controller's wires to any vehicle power point until mounting of the controller is completed.
2. **WARNING:** If the vehicle is equipped with air bags, the installer **MUST** consult the vehicle's shop or build manual to ensure that siren controller and it's wires will not affect deployment of air bags. This siren must be installed only in a location recommended by vehicle manufacturer. If necessary consult manufacturer for their recommendation.

Failure to adhere to this warning could result in damage to the air bag and or reduce the effectiveness of the air bag, which could result in bodily injury, or death to you or others.

3. The swing bracket included has been designed to mount to the siren controller either from the top for hanging under dash or bottom for top surface mounting.

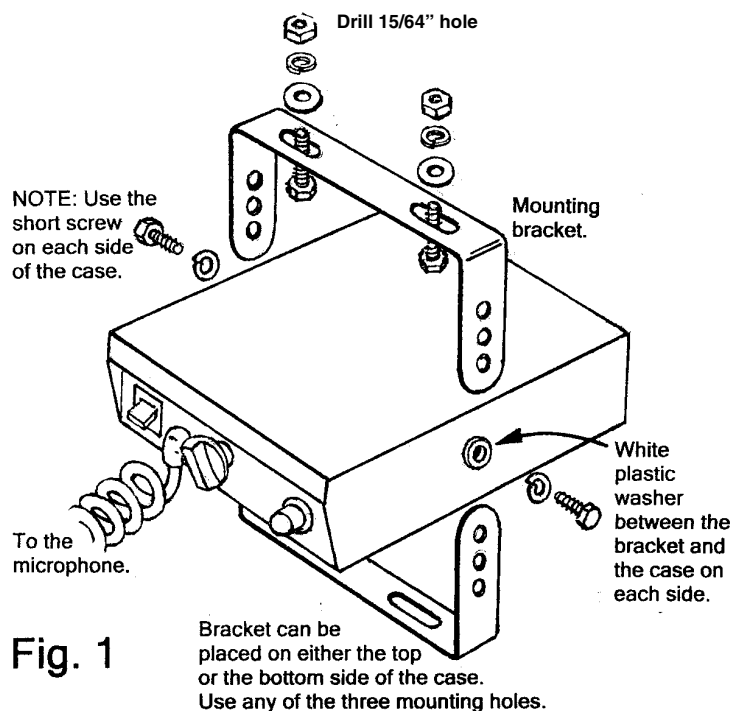


Fig. 1

CAUTION


- Before drilling any surface for mounting siren of the siren controller or for routing wires carefully inspect the desired location to ensure that there are no components, wires and or any other vehicle part that could be damaged by drilling.
- The siren controller must be mounted in a location that will provide good ventilation. Never install siren controller close to a vehicle's heater duct.
4. Using the swing-mounting bracket as a template, mark the location of mounting holes to be drilled.
5. Drill two-(2) holes on the marked locations using a 15/64" drill bit.
6. Secure the swing-mounting bracket to the desired location using the hardware provided, (5.95 mm x 20-screws, flat-washers, lock-washers and nuts).
7. The siren controller is secured to the mounting bracket using the hardware provided, (5.95 mm x 10-screws, lock-washer and plastic washer). Tilt and position the siren controller so that it is easily reachable by user. Tighten the two screws that secure the siren controller to the swing bracket.

HARNESS WIRE INFORMATION Fig. 2

8. The wire harness provided with the siren has a male plug end that mates with the connector located in the back of the siren controller. The plug is designed to connect and lock only in one position.

WARNING

- Do not connect the wire harness plug to the siren controller until all connections have been completed, wires are secured and the installer inspects and verifies that no short circuits exist.
- Before wiring the siren controller to the vehicle, carefully review the vehicle's shop or build manual to ensure the connection points will not affect the circuit or the vehicle's operation.
- If the vehicle is equipped with air bags, the installer **MUST** consult the vehicle's shop or build manual to ensure that the siren's harness wires will not affect deployment of the air bags. If necessary consult manufacturer for their recommendation.
- Any wires that pass through the vehicle's firewall or drilled sheet metal must have a rubber grommet or approved insulator inserted into the hole to protect the wires from being shorted or damaged from rough edges.
- Failure to follow these instructions could cause hazardous sparks, electrical fire, burns and personal injury.

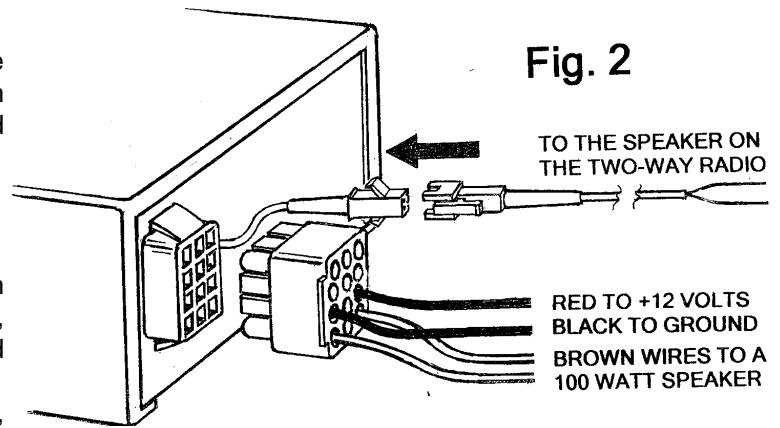

HARNESS WIRING

Speaker: Use 4 to 8 ohm speaker (Not included)

9. **BROWN** zip cord wires: are connected to speaker. If the harness wires need to be extended, use 18 gauge or heavier wire.

Radio rebroadcast: Will allow the user to broadcast the vehicle's two-way radio outside of the vehicle with controllable volume.

10. **WHITE** audio wires are connected to the speaker of the two-way radio. If white wires need to be extended, use 18 gauge audio wire or heavier wire.

11. **BLACK WIRE** is connected to ground. Secure black wire under a metal body bolt in the dashboard area; make sure that the METAL surface around the bolt is clean of rust and paint to make a good electrical CONNECTION.

12. **RED WIRE** is connected to the vehicle's fuse-block or a under dash wire that has 12-volts when the ignition is on. The red wire is provided with an in-line fuse. (Note: if you need to replace the fuse use a 10 amp.) **IMPORTANT:** Carefully review the vehicle's shop or build manual to ensure the connection points will not affect the circuit or the vehicle's operation.


NOTE: Tape all connections and secure wires.

13. Connect the male plug to its female mate in the rear of the siren controller.

Note: The plug is designed to connect and lock only in one position.

MOUNTING MICROPHONE HANGER BRACKET Fig. 3

Select a location that the microphone can easily be reached. Using the microphone hanger bracket as a template, mark the two locations and drill to size, 1/8" drill bit. Secure the microphone bracket with the two-(2) sheet metal screws provided. **CAUTION:** Before drilling the surface for mounting of the microphone bracket, inspect the desired location to ensure that there are no components, wires and or any other vehicle part that could be damaged by drilling.

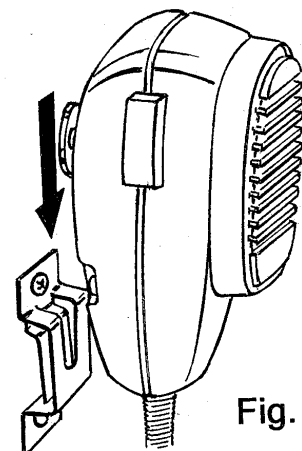

TESTING AFTER INSTALLATION

GAIN CONTROL: The GAIN CONTROL is used to turn on/off the siren controller and adjust the volume. Turn the rotary GAIN control clockwise, which will turn on the siren controller. Further clockwise rotation of GAIN control will increase the volume of all siren sounds, P.A system and radio rebroadcast (if that option is used). The maximum clockwise position of the GAIN CONTROL is determined by either feedback or squeal being amplified. Adjust the GAIN CONTROL to be positioned just before feedback occurs or to a sound level that is desired.

SELECTOR SWITCH: The rotary switch located in the center of the front panel is used to control five functions, which are: three (3) different siren sounds, manual siren operation and radio rebroadcast.

14. Test each siren sound by positioning the selector control to the following positions:
- **WAIL:** When the selector is in this position the siren produces a “WAILING” sound that is continuous.
 - **YELP:** When the selector is in this position the siren produces a “YELP” sound that is continuous.
 - **HI-LO:** When the selector is in this position the siren produces a two-tone “HI-LO” sound that is continuous.
 - **MANUAL CONTROL SWITCH:** The switch position allows the user to manually control two (2) siren sounds, **AIR HORN / SIREN**. The manual control is located on the left side of the siren’s control panel. Lifting and holding the switch activates the air horn sound. Pressing down and holding the switch will active a powerful siren. The manual switch will also design to override any siren that is in use.
 - **RADIO:** If you have connected the two-way radio to the siren controller for radio rebroadcast (see step number 10), position the selector control to **RADIO**. Turn on the vehicle’s two-way radio. The radio’s rebroadcast volume is controlled by the two way radio’s volume control.

P.A. SYSTEM:

15. Position the selector control to MANUAL. To test the P.A. system, depress the microphone’s push-to-talk button. Speak into the microphone in a normal voice. The volume is controlled by the GAIN control. The P.A. system will also override any siren that is sounding.

SPECIFICATIONS: Siren controller

- 12-volt / 100 watts maximum output
- L 6 in. x Depth 7-1/2 in. x H 2-1/2 in.
- Current 6.5 amperes volume control set at maximum
- Case is all metal black enamel painted
- Adjustable metal chrome plated swing bracket provided
- Illuminated front control panel by LED’s
- Noise canceling microphone
- Power harness is six-(6) ft. in length and has an inline fuse-holder
- Weight 2.5 pounds (controller without swing bracket)

Cycle RateWail – 20 cycles/min
.....Yelp – 180 cycles/min
.....Hi-Lo – 60 cycles/min