BOYO®
VISION

VTM700M
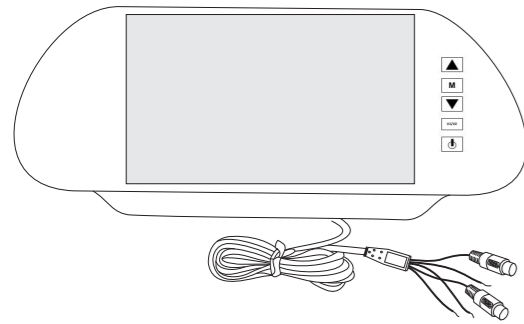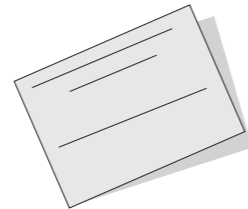## Rear view 7" TFT-LCD Monitor

User's manual

1.Parts list

A.7" TFT monitor ×1   B.Remote controller×1   C.User's manual ×1
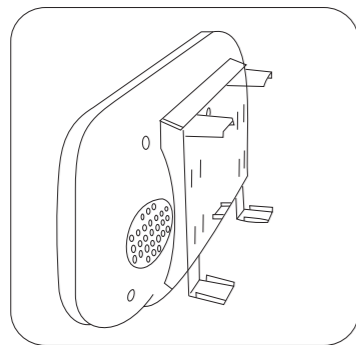
2.Diagram of installation

A:

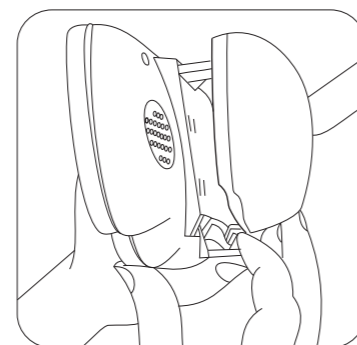Figure (1)   Figure (2)

B:Connection

Red wire connects anode +12v
Black wire grounded
Green wire connects to reversing lamp 12v

Video Av1 connects VCD/DVD signal input
Video Av2 connects camera signal input
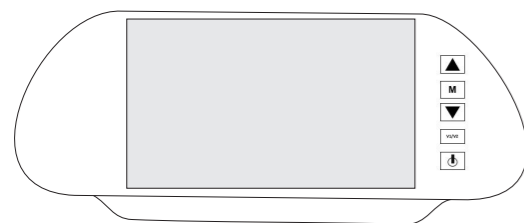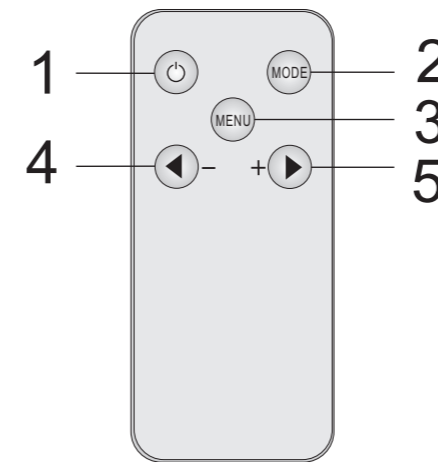
3.Functions of Button

1.▲:Analog +/- (adjust brightness,contrast,color,pos:DN Normal (reverse image),etc.)

2.Menu: menu options (press MENU to shift different menus)

3.▼:Analog +/-(adjust brightness,contrast,color,pos:DN Normal

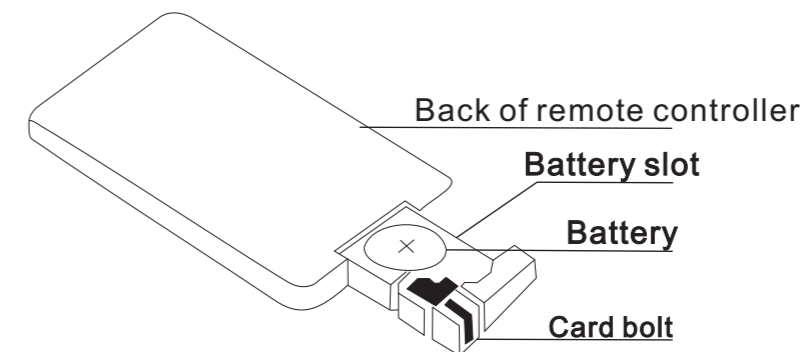4.V1/V2: Switch Between AV1 and AV2

5.Power: Power on/off

4.Remote controller

A:operations of remote controller

1   2
           3
4   5

1.Power: power on/off(when the monitor is powered on,press POWER button to close menu,press and hold it for 1 second to power it off)
2.Mode: change the Av1 or Av2
3.Menu: menu options (press MENU to shift different menus
4.◀:Analog +/- (adjust brightness,contrast,color,pos:DN Normal (reverse image),etc.)
5.▶:Analog +/-(adjust brightness,contrast,color,pos:DN Normal (reverse image),etc.)

B:Installation of batteries

Back of remote controller
Battery slot
Battery
Card bolt

5.Specification

Model	VTM700M
Display resolution	800(W)*480(H)
System	PAL/NTSC
Power consumption	6W (MAX)
Monitor dimension	9.75"(W)*4.2"(H)*1.75"(D)
Storage temperature	-4°F ~ +149 F°
Operation Voltage	DC12V

Care instruction

1.We strongly recommend have qualified technician or maintenance to install this device.

2.If this monitor does not work well, please check the connection first.

3.For your safety, please do not watch the monitor entertainment while you are driving

Learn more about cameras and driver safety we have.