



Installation Instructions for PN: 30-8444 Universal Gauge Boot for 52MM (2 1/16") Gauges

AEM's Universal Gauge Boot acts like a wet suit or shower cap for virtually any 52mm gauge. It is made of silicone rubber and is designed to stretch onto the back of the gauge cup while keeping dust, water, dirt, and mud out of the back of the gauge when installed correctly.

!!Please note: The installation of this Gauge Boot does not make the gauge waterproof!!

1. Insert the gauge harness/harnesses into the tubular snout of the boot. See Figure 1 below. The gauge boot is made from silicone rubber and will stretch some. However, it is recommended that the unterminated end of the harness or the smallest connector be passed through the snout. Note: Use caution during assembly as sharp objects can pierce the boot.

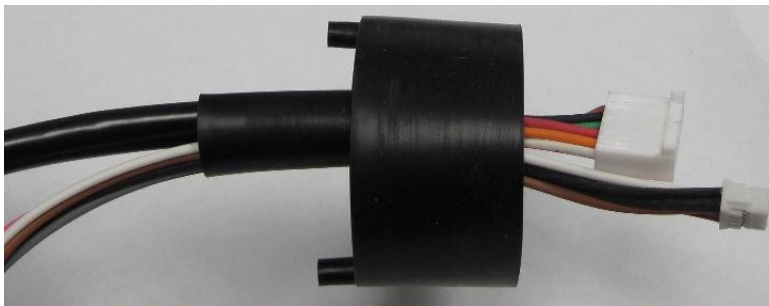


Figure 1. Insert Harnesses

2. Connect the harness/harnesses to the gauge and pull the boot over the gauge cup. It may be helpful to turn the boot inside out and roll it onto the cup, inserting the mounting studs first. See Figure 2 below.



Figure 2. Installed Boot



3. With the gauge boot fully installed on the gauge cup, place the supplied zip tie around the snout on the gauge boot and tighten. See Figure 3.

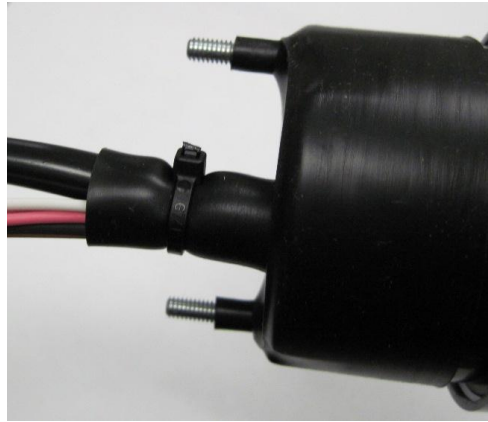


Figure 3. Installed Zip Tie