
INSTALLATION INSTRUCTIONS

Cat -Back Exhaust

MAKE: Chevrolet / GMC
MODEL: Silverado/ Sierra
YEAR: 2019
ENGINE: L4-2.7L (t)

49-44108-B
49-44108-P

Fits the CC/SB, CC/SB 139” WB & DC/SB 157” WB

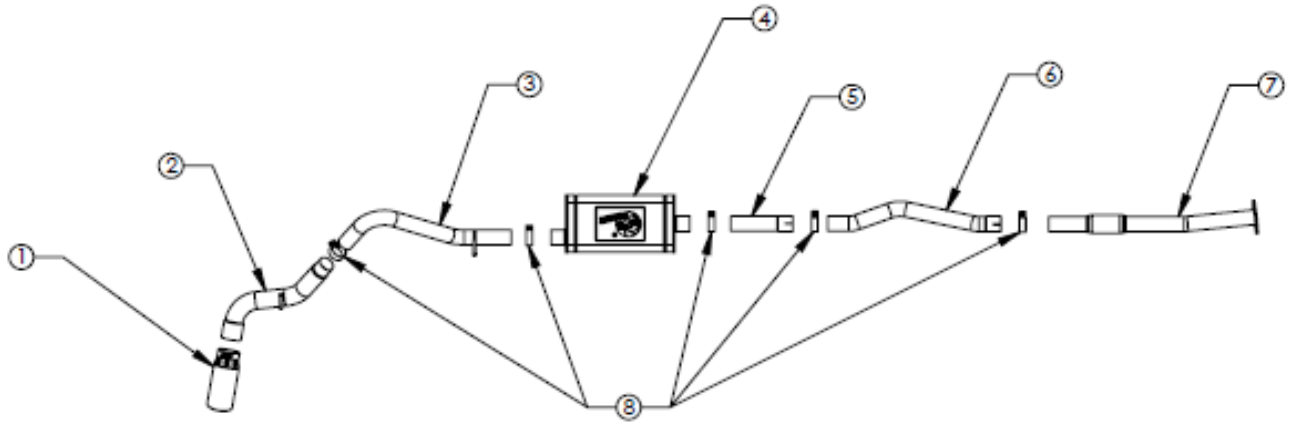

Item	*Description*	*Part Number*	*Quantity*
1	*Exhaust Tip*	*R49T40501-B12*	*1*
1	*Exhaust Tip*	*R49T40501-P12*	*1*
2	*Tail Pipe*	*05-144651*	*1*
3	*Over-Axle Pipe*	*05-144649*	*1*
4	*Muffler*	*49M00016*	*1*
5	*Extension Pipe*	*05-144644*	*1*
6	*Mid-Pipe*	*05-144643*	*1*
7	*Front Pipe*	*05-144800*	*1*
8	*Band Camp*	*05-41055*	*5*

aFe POWER recommends professional installation on this product. Thoroughly inspect the aFe POWER exhaust system to make sure there is no damage from shipping (if damage is noted, immediately contact aFe POWER customer service). Allow time for your vehicle to cool down prior to installation. When working on your vehicle proceed with caution. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

Install band clamps to proper torque specifications of 40-45 ft-lb.



INSTALLATION INSTRUCTIONS

Cat -Back Exhaust

MAKE: Chevrolet / GMC — 49-44108-B

MODEL: Silverado/ Sierra — 49-44108-P

YEAR: 2019

ENGINE: L4-2.7L (t)

Fits the CC/SB, CC/SB 139” WB & DC/SB 157” WB

1. **(Read instructions prior to installation.)** It is recommended to not fully tighten the exhaust until it has been fully installed. Leave loose for adjustability.
2. Secure vehicle on jack stands (refer to your manual for specified jack stand positions).
3. For faster installation, spread out the parts of the exhaust alongside your vehicle as shown in the diagram above.
4. Secure the stock exhaust with jack/stands.
5. This system will require cutting to remove the O.E exhaust system.
6. Using a marker, scribe a line where indicated in the photo. (FIG. 2)
7. Using a reciprocating saw and cut the exhaust where marked.
8. Remove the rear half of the O.E exhaust.
9. Remove the front Half of the O.E exhaust up to the flanged joint.
10. Install the aFe POWER Front Pipe using the O.E nuts
11. Install the Mid Pipe using the provided 3” band clamp.
12. Install the extension pipe using the provided 3” band clamp. Only install the extension pipe for the CC/SB 156” wheelbase. Do not use extension pipe for the CC/SB or the DC/SB 147” wheelbase.
13. Install the Muffler using the provided 3” Band Clamps.
14. Install the Over-Axle Pipe using the Provided 3” Band Clamp.
15. Install the Tail Pipe and Tip using the Provided 3” and 4” Band Clamps.
16. Ensure that all the components of the aFe POWER exhaust system are aligned and are at a safe clearance from all wires, hoses, brake lines, body parts, and tires.
17. Start from the front of the aFe exhaust system and evenly tighten all clamps and fasteners.
18. Start the vehicle and check for any leaks. If any leaks are found, determine cause and repair if necessary.
19. Remove vehicle from jacks stands.
20. It is recommended to re-tighten all clamps and hardware after 50-100 miles.

