




## INSTALLATION INSTRUCTIONS

MAKE: Nissan  
MODEL: Titan  
YEAR: 2016-2017  
ENGINE: V8-5.6L

FITS: (139.8") Standard Cab/Long Bed w/ 8 ft. Bed; (139.8") King Cab/Long Bed w/ 6.6 ft. Bed;  
(139.8") Crew Cab/Standard Bed w/ 5.6 ft. Bed

**2-1/2" Cat-Back**  
**409 Stainless Steel**  
**49-46126-B (Black Tips)**  
**49-46126-P (Polished Tips)**

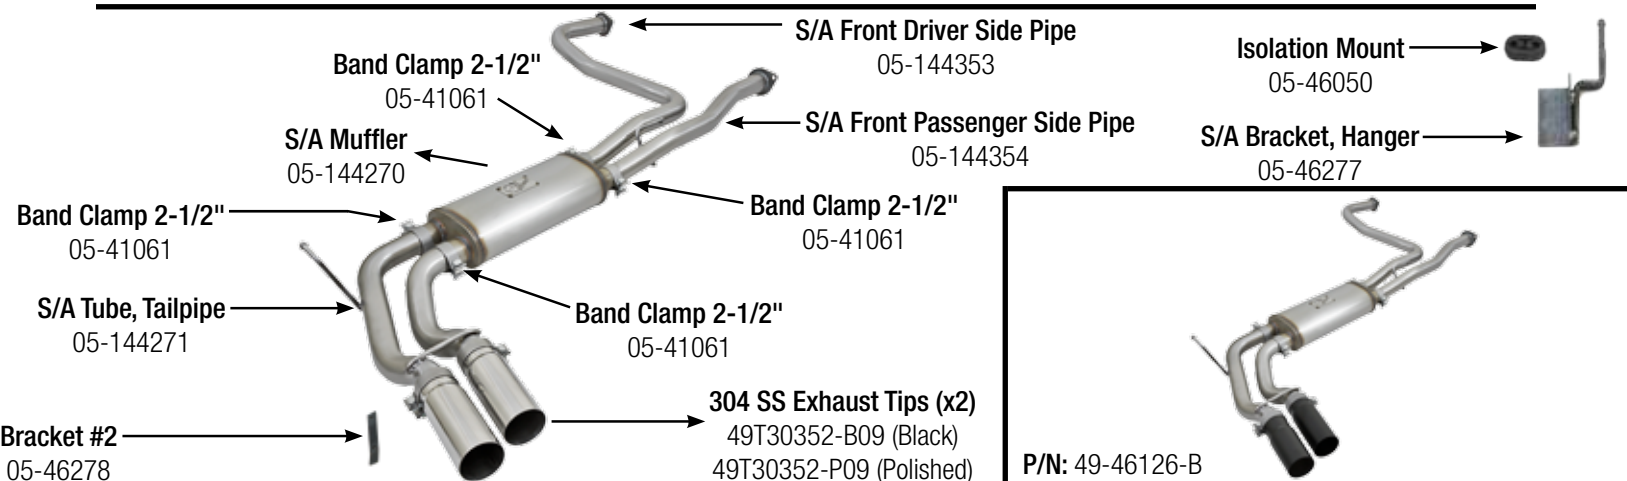

**Caution:** Allow time for your vehicle to cool down prior to installation. When working on or under your vehicle proceed with caution. Exhaust systems reach high temperatures and may cause serious burns. Wear protective safety equipment; eye goggles and gloves to ensure a safe installation.

- Step 1:** Remove your stock exhaust up to the catalytic converters. be sure not to damage any of the hardware as it will be re-used.
- Step 2:** Remove the front OE hanger mount and install the provided hanger bracket #2 (See photo's for reference).
- Step 3:** Install driver and passenger front pipes using the OE Nuts.
- Step 4:** Install the (x4) 2.5" band clamps onto the muffler assembly. Then install muffler assembly onto the front pipes. (Use a jack stand to support muffler assembly)
- Step 5:** Remove the rear OE hanger mount. Using the OE bolts install the provided hanger bracket #1 and isolation mount where the OE hanger mount was. (See photo's for reference).
- Step 6:** Install the tailpipe assembly and tips.
- Step 7:** Align exhaust system and tips to desired location and tighten all nuts, clamps, and bolts.
- Step 8:** Congratulations, Your system is now complete and fully installed! It is recommended to re-tighten all clamps and bolts after 50-100 miles.

- aFe recommends that the tailpipe be at least 1/2"-1" away from any body panels to avoid heat related body damage. **Tighten and secure.**
- It is normal for your exhaust system to emit smoke for the first few minutes upon initial start-up.

