

**ALPHAREX**

Installation Guide for 08-10 FORD SUPER DUTY F-250 / F-350 / F-450 / F-550 Headlights

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrival innovative technology. The following installation guide we take you through the installation of your new **ALPHAREX HEADLIGHTS** for your 2008-10 Ford Super Duty F-250 / F-350 / F-450 / F-550 step by step.

NOTE: Some vehicle require the DRL harness installed for the headlight to function properly.



Table of Contents



PART I REMOVE HEADLIGHTS

- **INSTALLATION TOOLS**
- **STEP 1.** Disconnecting the negative battery terminal
- **STEP 2.** Remove headlight bolts

PART II INSTALL HEADLIGHTS


- **STEP 1.** Route the DRL harness
- **STEP 2.** Tap the fuse
- **STEP 3.** Plug and install headlights
- **STEP 4.** Test the headlight functions
- **STEP 5.** Adjust headlight level
- **STEP 6.** Complete installation

Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.


PART I REMOVE HEADLIGHTS

INSTALLATION TOOLS

PREPARE THESE TOOLS FOR INSTALLATION




Metal Panel Popper



Flat Screwdriver



Phillips Screwdriver

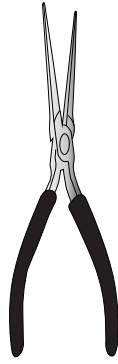

Pliers



1/4 Ratchet



1/4 Extension

7mm



Socket


STEP 1. DISCONNECTING THE NEGATIVE BATTERY TERMINAL

Whenever working on your vehicle always start by disconnecting the negative battery terminal.



STEP 2. REMOVE HEADLIGHT BOLTS

First, open the hood and start by removing the 4 X 7mm bolts from each headlight. (1 bolt on the top, 2 bolts on the side and 1 bolt at the bottom)

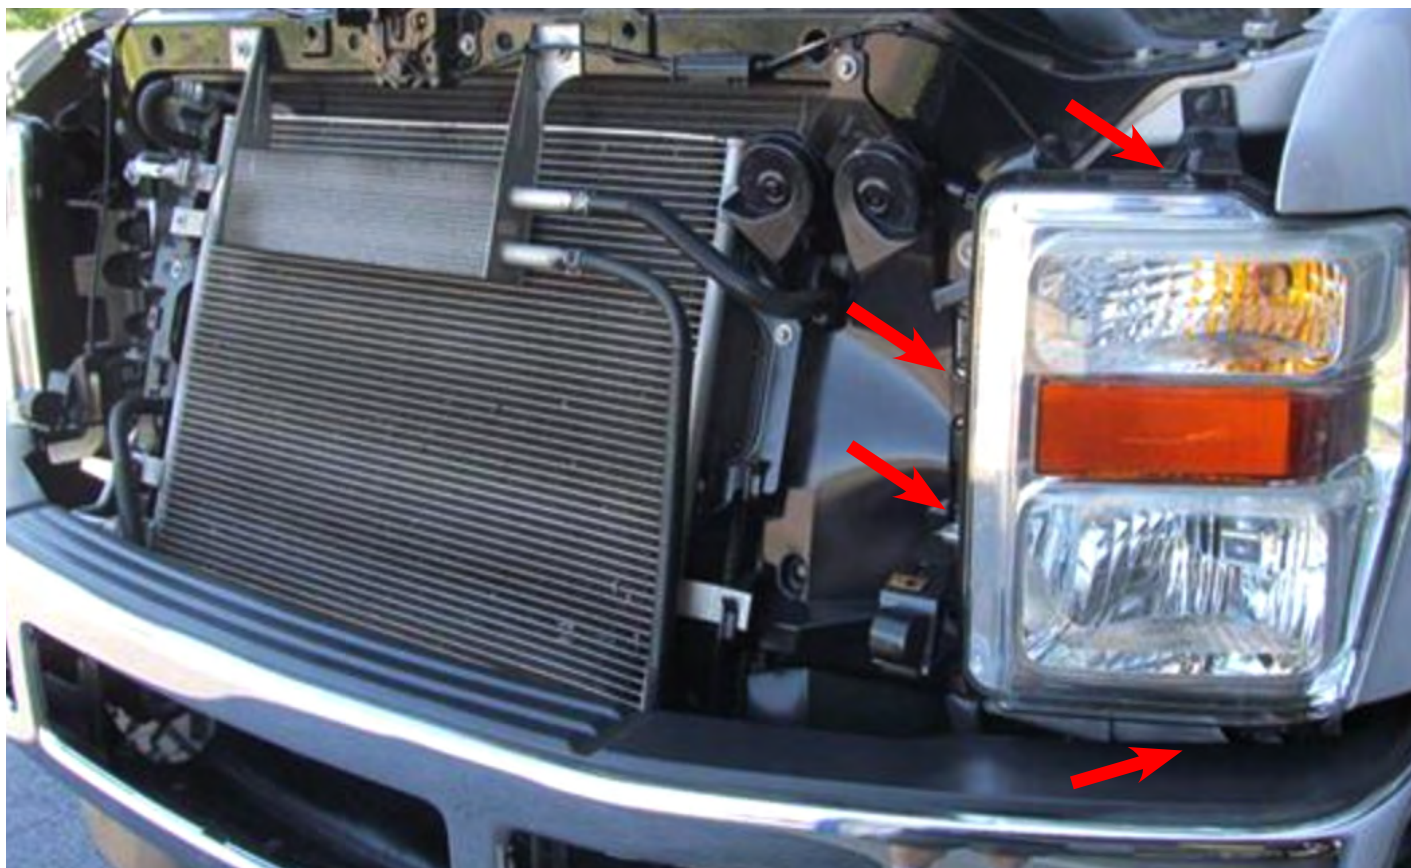

Next, carefully pull forward the headlight and unplug the lights sockets for the headlight removal. Please follow the same steps for the other side.




PART II INSTALL HEADLIGHTS

STEP 1. ROUTE THE DRL HARNESS




Route the daytime running lights harness to the two headlights. Start at the passenger side which is closest to the trucks battery.

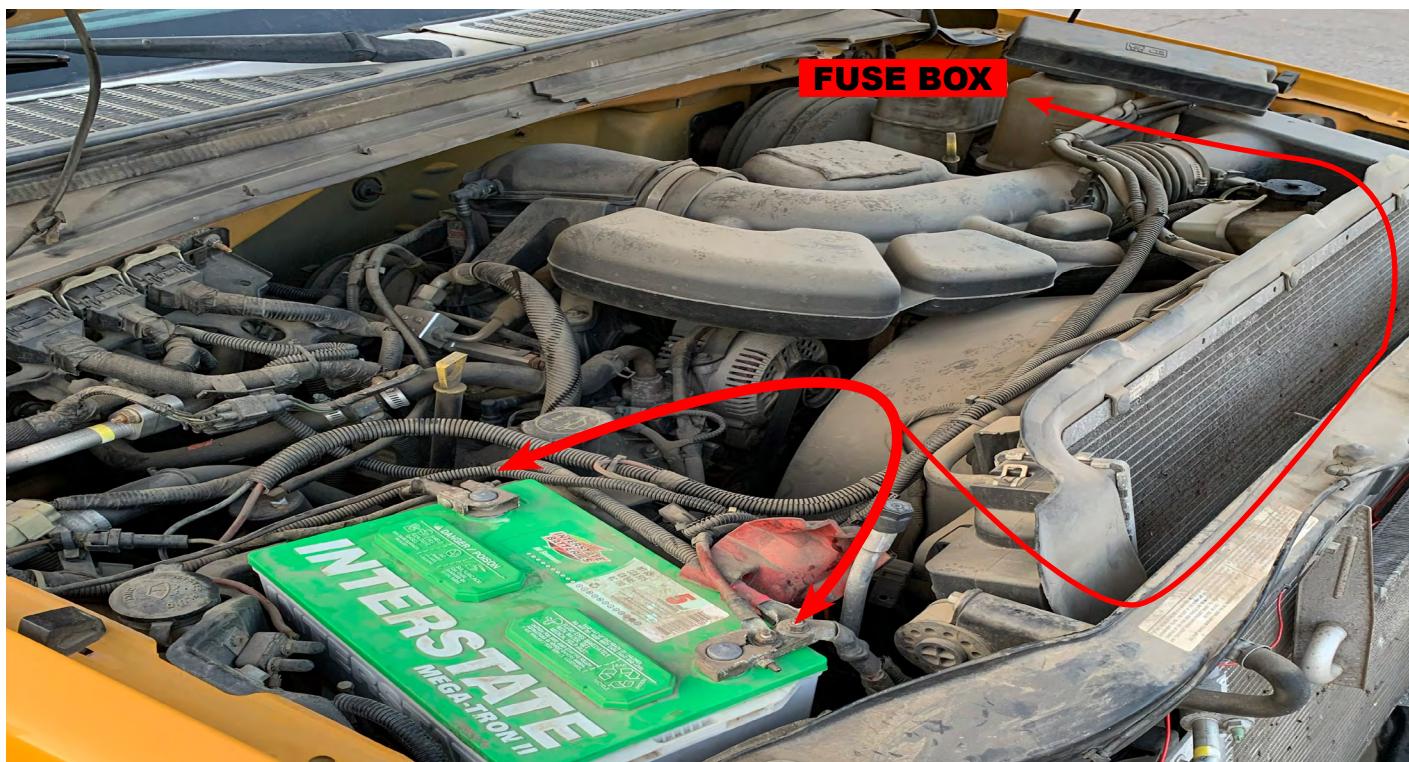


STEP 2. TAP THE FUSE

Crimp the gray wire from the daytime running lights harness to the fuse tap.

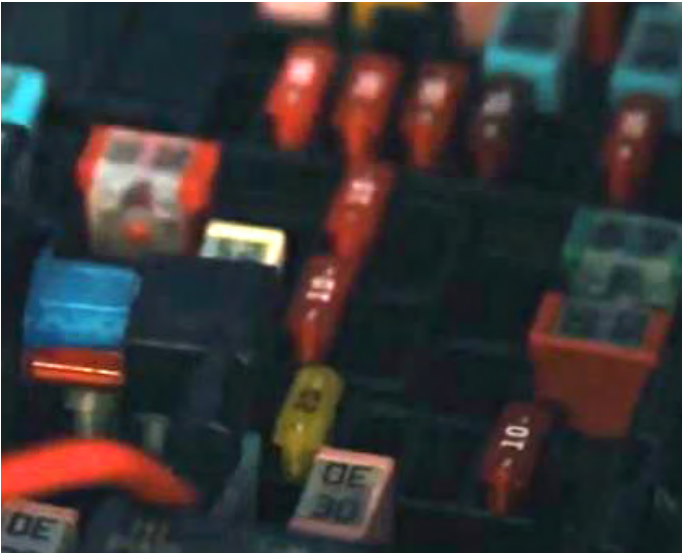

Go to the fuse box and tap into any of the highlighted fuse.

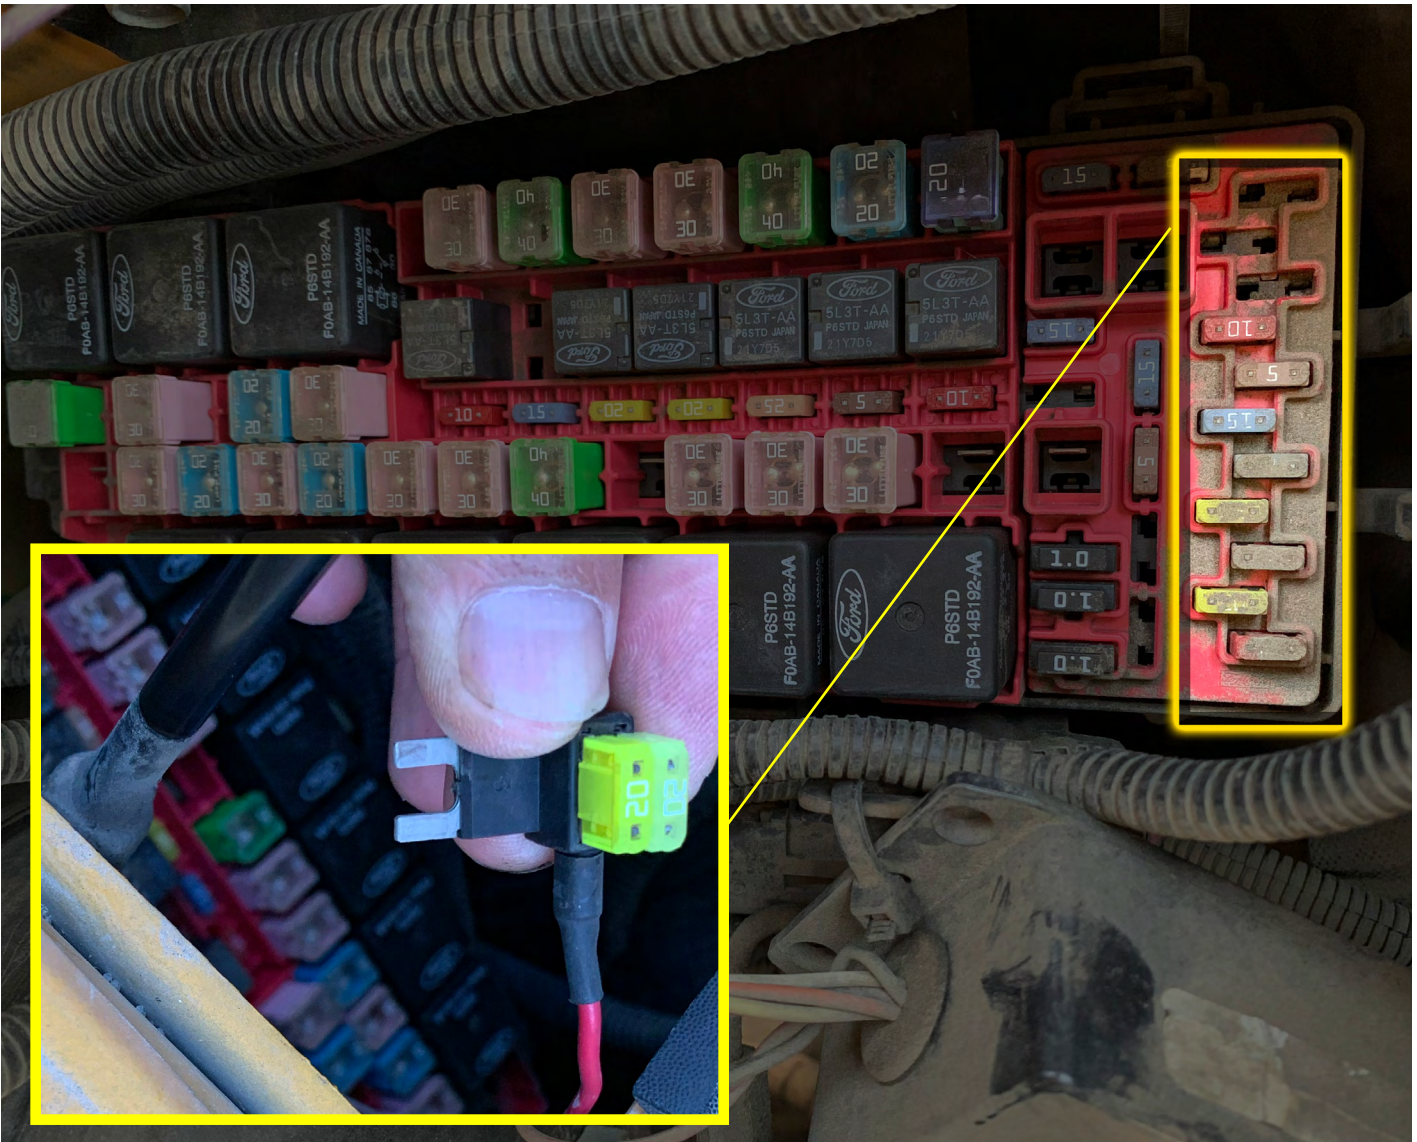

Connect the red wire to the battery positive terminal and the black wire to the battery negative terminal.




STEP 3. PLUG AND INSTALL HEADLIGHTS

Connect low/ high beam, daytime running lights and turn signal wiring harnesses to the new ALPHAREX headlight.




Then finish the installation by securing the headlight to the truck.
Repeat the previous steps for the opposite side headlight for installation.

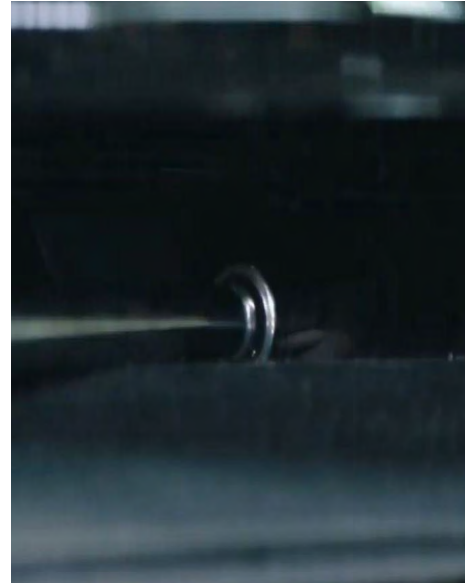

STEP 4. TEST THE HEADLIGHT FUNCTIONS

Test the functions of your ALPHAREX headlights to ensure everything works properly.

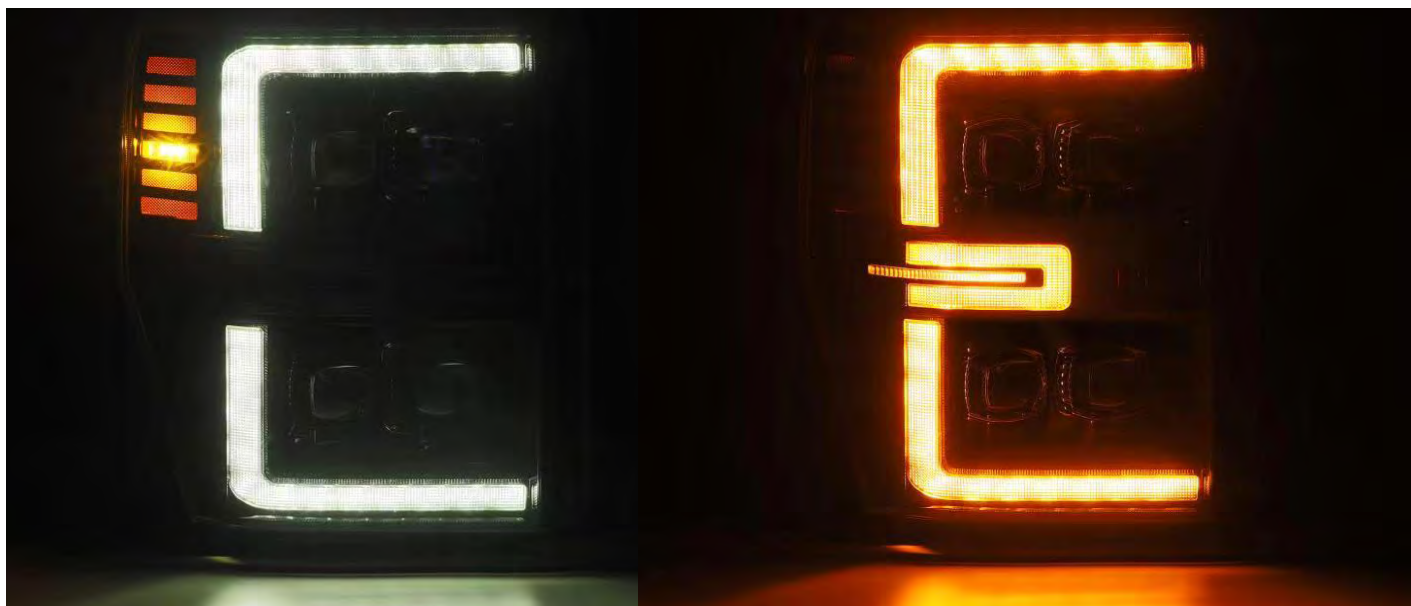

STEP 5. ADJUST HEADLIGHT LEVEL

Once everything has been tested aim your ALPHAREX headlights by parking 25ft from a wall and level the headlight beams evenly.

Turn clockwise: to lower the light

Turn counterclockwise: to raise the light



STEP 6. COMPLETE INSTALLATION

Congratulations! you have completed the installation for ALPHAREX 08-10 Ford Super Duty F-250 / F-350 / F-450 / F-550 headlights.





How to switch to Amber (Yellow color) DRL & Parking Lights for ALPHAREX 08-10 Ford Super Duty Headlights

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrival innovative technology. The following instruction guide we take you through on the topic: **How to switch to Amber (Yellow color) DRL & Parking lights for the new ALPHAREX HEADLIGHTS** for your 2008-10 Ford Super Duty step by step.

THIS INSTRUCTION GUIDE APPLIES FOR THE FOLLOWING ALPHAREX HEADLIGHT PRODUCT MODELS:

08-10 Ford Super Duty NOVA-Series LED Projector Headlights (Black) / SKU: 880310

08-10 Ford Super Duty NOVA-Series LED Projector Headlights (Alpha-Black) / SKU: 880311

08-10 Ford Super Duty LUXX-Series LED Projector Headlights (Black) / SKU: 880312

08-10 Ford Super Duty LUXX-Series LED Projector Headlights (Alpha-Black) / SKU: 880313

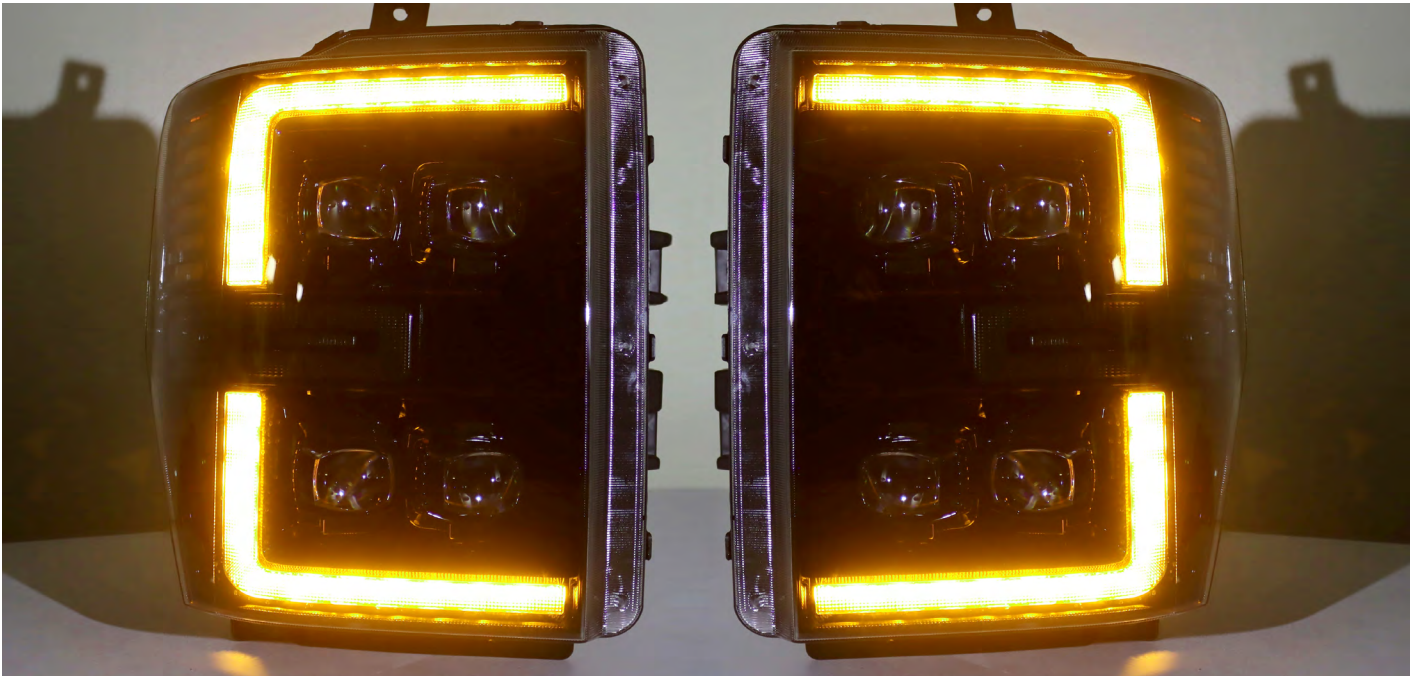


Table of Contents



- **STEP 1.** Amber switch plugs location
- **STEP 2.** Connect the Amber switch plugs
- **STEP 3.** Complete switching into Amber DRL & Parking lights

Disclaimer: This article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the instruction procedure, it is highly recommended that you seek help from professional mechanics to do the instruction.


From **The product models list**, the **LUXX-Series** and **NOVA-Series** headlights for 08-10 Ford Super Duty come with optional switch plugs for Amber (Yellow color) DRL & Parking lights. **By default the DRL & Parking lights color are White from factory.**

CUSTOMERS CAN CHOOSE TO SWITCH INTO AMBER (YELLOW COLOR) BASED ON THEIR PREFERENCE. PLEASE NOTE: once you PLUGGED & switched into Amber, the DRL & Parking lights color will remain (Yellow color) at all times.




STEP 1. AMBER SWITCH PLUGS LOCATION


Open the Low Beam dust cover from back of each ALPHAREX headlights

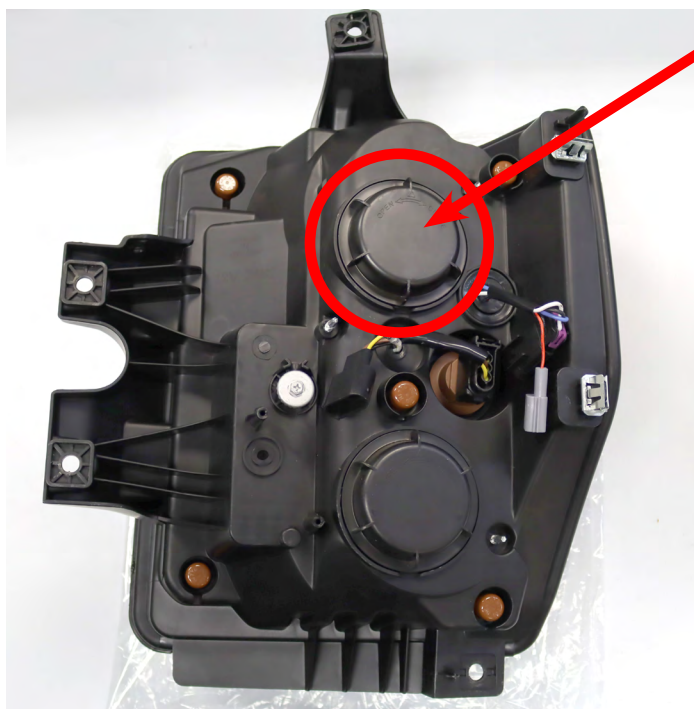

counterclockwise to open

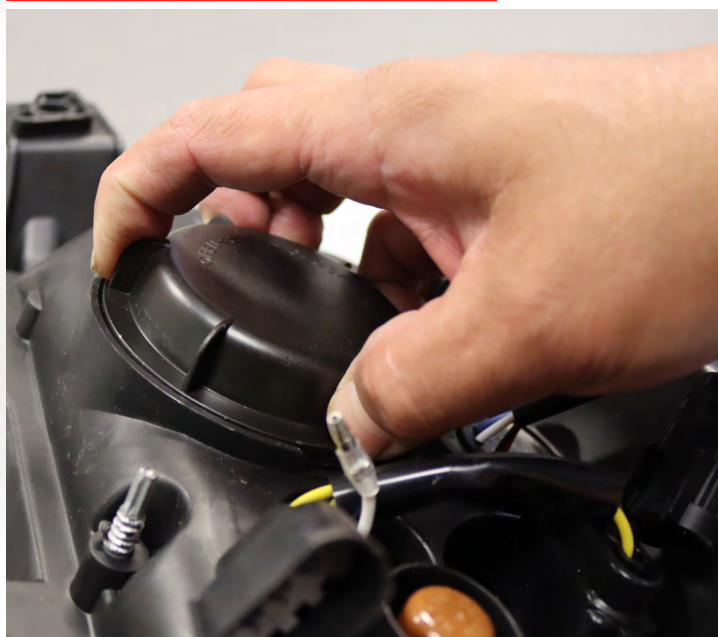


Inside of the headlight, you will find plug connectors for switching into Amber (Yellow color) DRL & Parking lights.

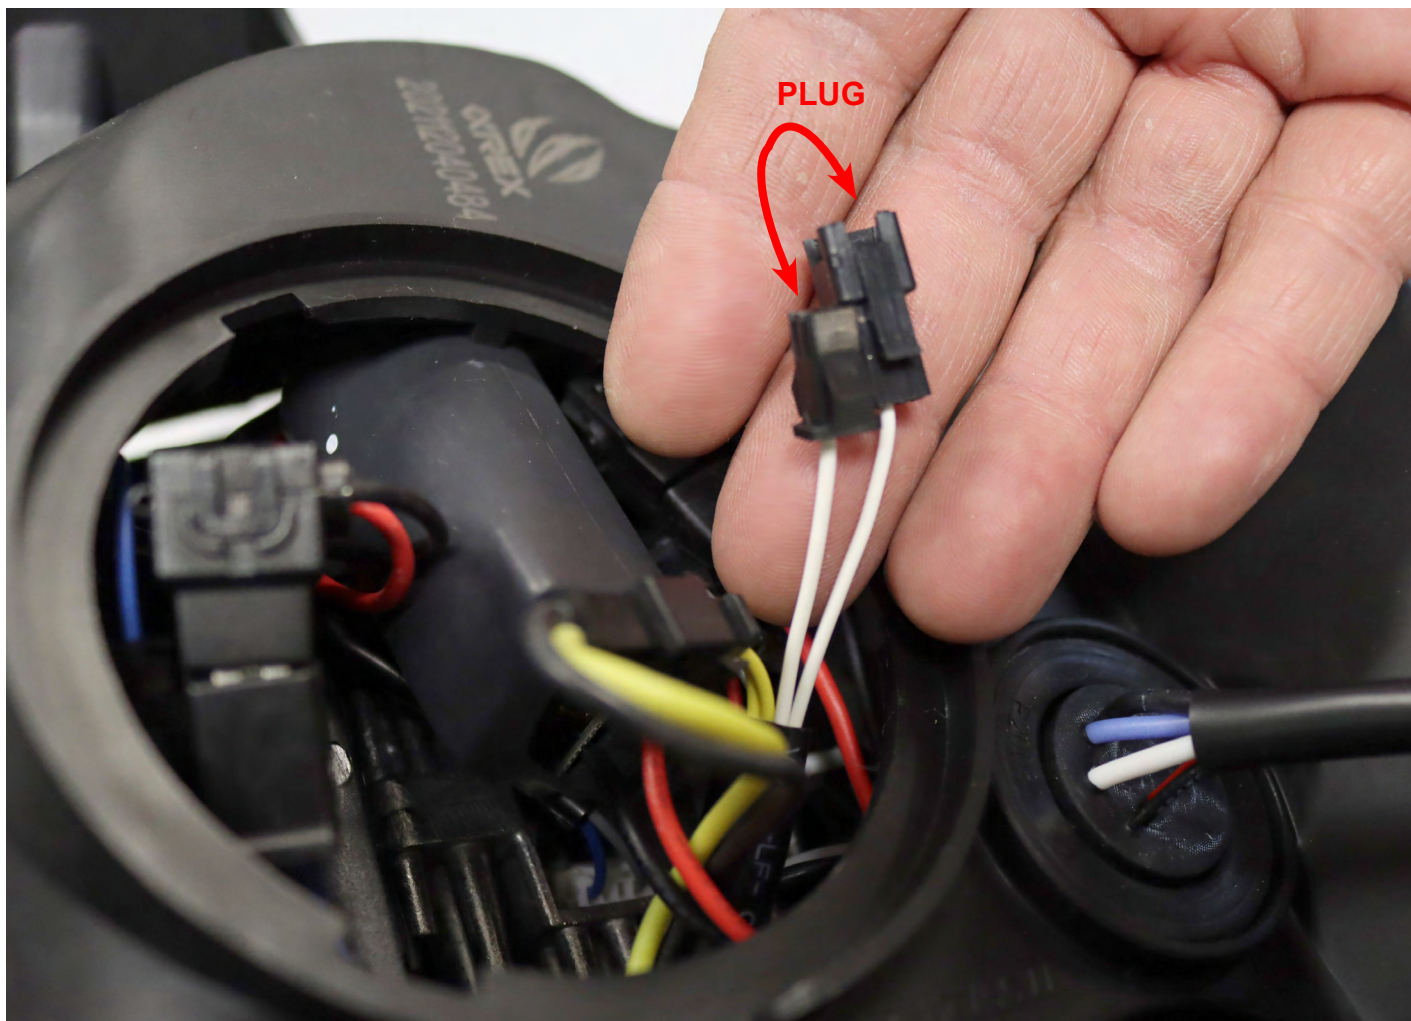

STEP 2. CONNECT THE AMBER SWITCH PLUGS

Connect the amber DRL plugs directly for each of the headlights.

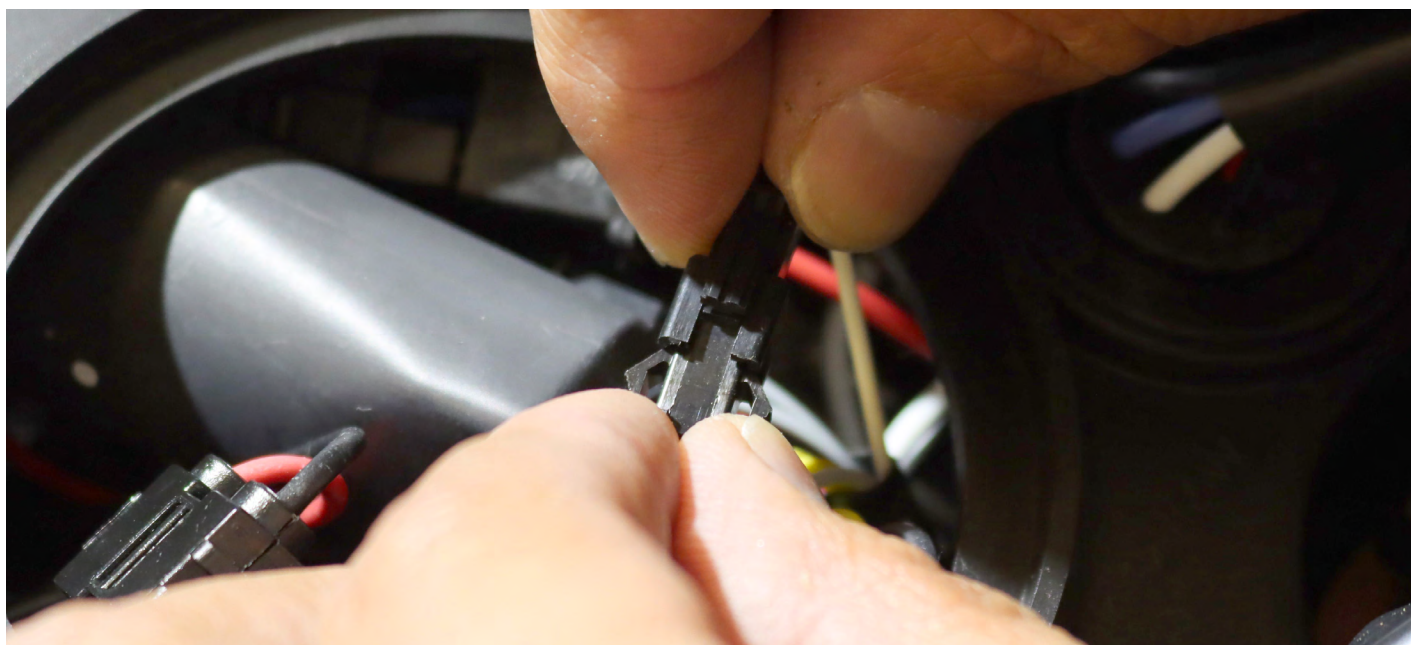

STEP 3. COMPLETE SWITCHING INTO AMBER DRL & PARKING LIGHTS

After plug-in the connections, please install the headlights to the vehicle.

Congratulations! You have switched into Amber (Yellow color) DRL & Parking lights.

