


# AMP RESEARCH BedStep®

MADE IN USA

Ford F-150 2006 - 2014  
(Style Side Only)

PART NUMBER:  
AMP 75302-01A


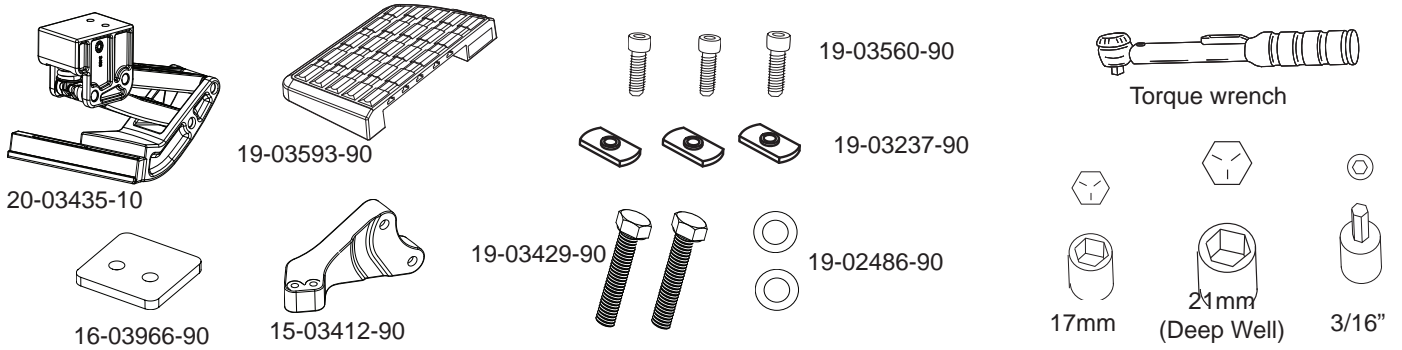


[Spacer](#) is required for 2012-2014 model trucks.

33 ft-lbs / 44 Nm

1


2

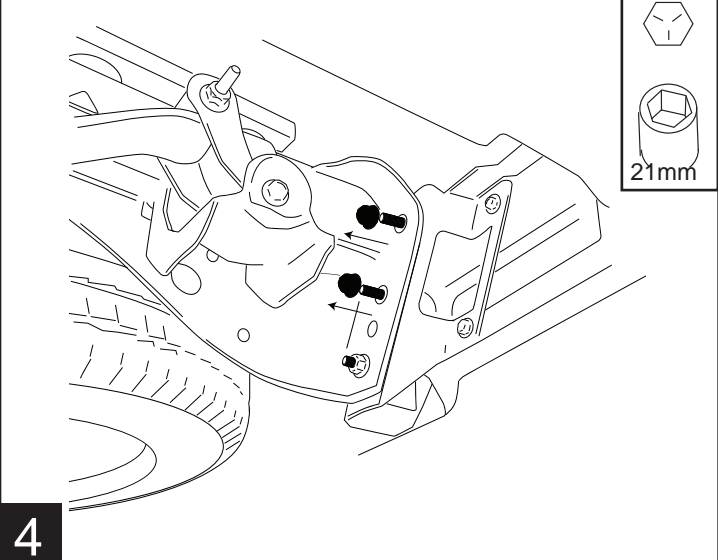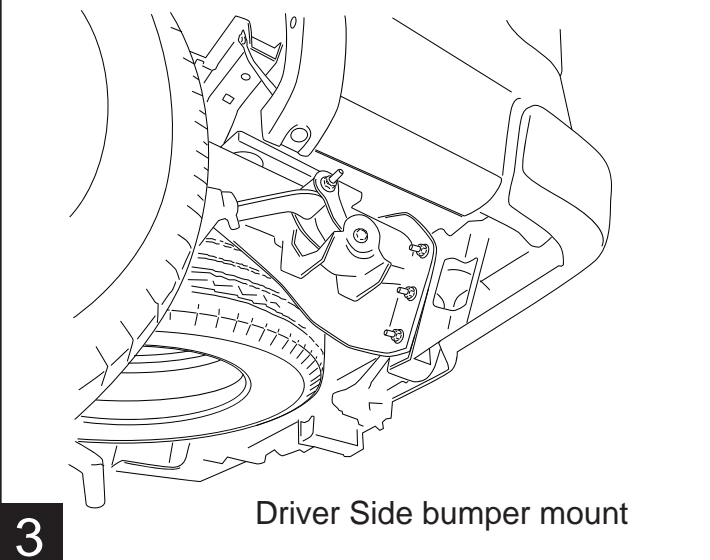


3

4


80 ft-lbs / 108 Nm



5


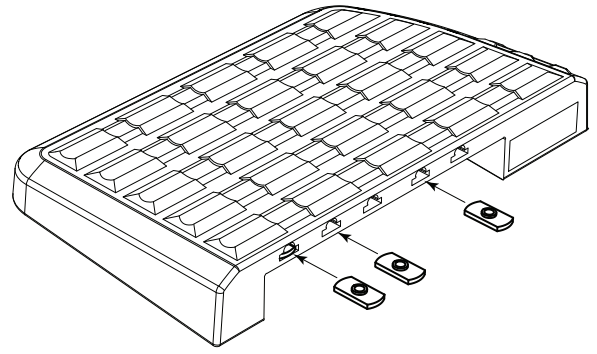


6

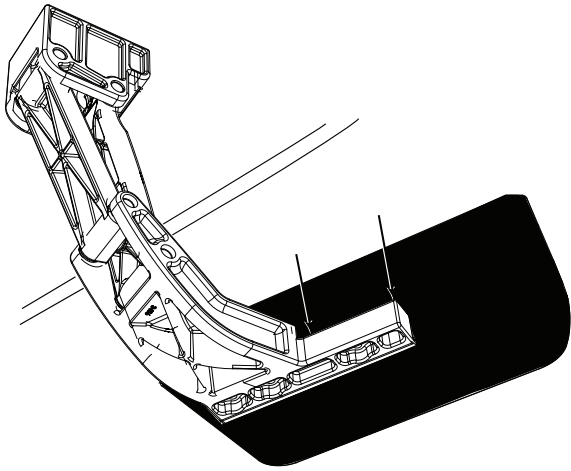


7

6 ft-lbs / 8 Nm

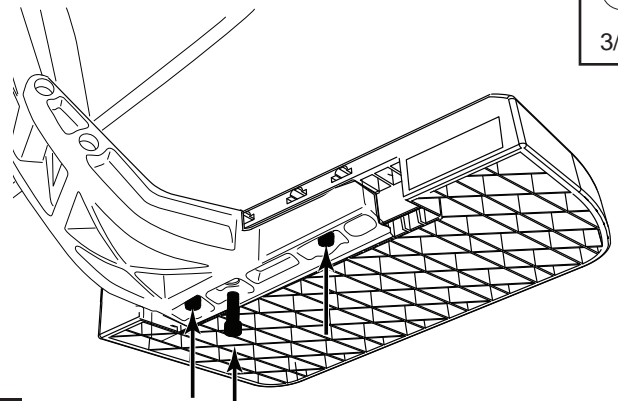


8

NOTE: Overtightening may damage step pad

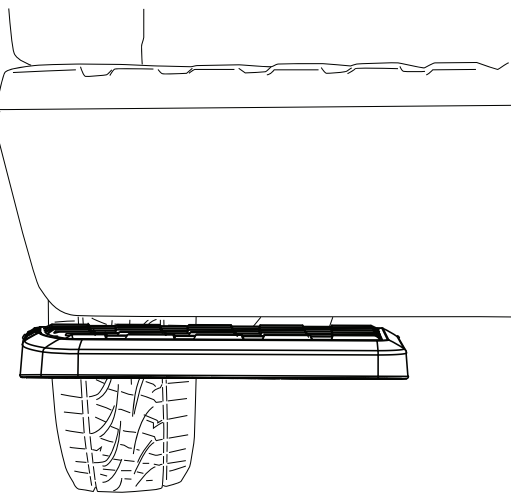

9

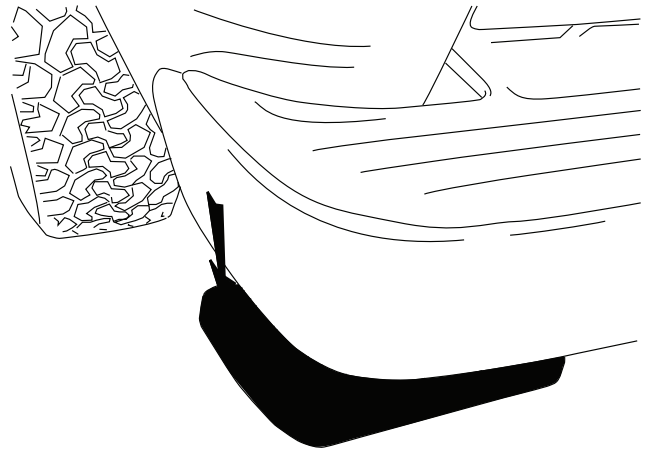

10