


PLEASE NOTE: IF YOUR LIGHTS ARE NOT SYNCING WITH THE SAME COLOR ON BOTH SIDES, IT DOES NOT MEAN THE LIGHTS ARE DEFECTIVE. PLEASE PRESS THE BLUE SWITCH TO SELECT THE COLOR OF YOUR CHOICE AND THEN DISCONNECT NEGATIVE BATTERY TERMINAL FOR 20 MINUTES. THIS WILL ALLOW THE CAN BUS SYSTEM TO RESET. THE LIGHTS SHOULD BE SYNCHRONIZED AFTER YOU RECONNECT THE NEGATIVE BATTERY TERMINAL.

**PLEASE CONTACT TECH SUPPORT SHOULD YOU NEED FURTHER ASSISTANCE:
EMAIL: TECHSUPPORT@ANZOUSA.COM CALL (909) 590-8618**

STEP 1

AFTER REMOVING BUMPER, REMOVE THE OE/FACTORY AIR DUCT COVER TO BEGIN INSTALLATION OF YOUR NEW DRL AIR VENT LIGHTS.


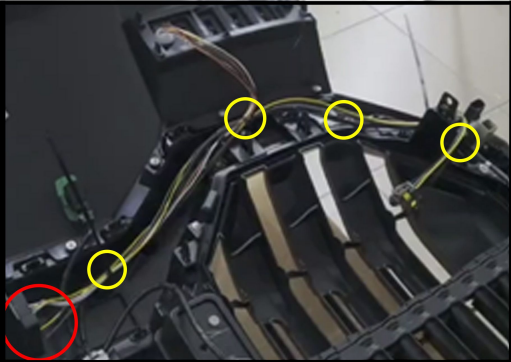


STEP 2

ATTACH THE AIR VENT LIGHTS LED DRIVER USING DOUBLE-SIDED TAPE AT THE LOCATION ON THE INNER SIDE OF BUMPER (CIRCLED IN RED). USE RUBBING ALCOHOL TO REMOVE ANY DIRT OR GRIME BEFORE ATTACHING. ROUTE AND SECURE DRL AIR VENT LIGHT HARNESS WITH ZIP TIES AT THE 4 LOCATIONS CIRCLED IN YELLOW.

STEP 3

LOCATE PROVIDED 3-PIN DOUBLE-CONNECTOR HARNESS. CONNECT A TO THE HEADLIGHT CONNECTOR CONNECT VB TO OE VEHICLE SIDE CONNECTOR

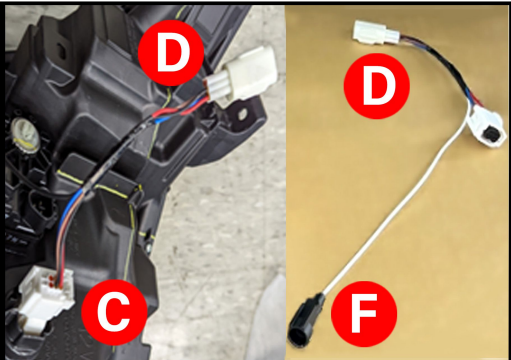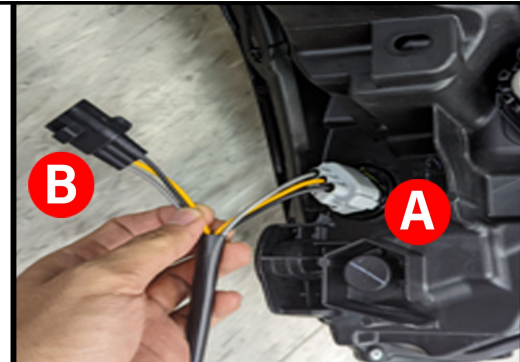

STEP 4

LOCATE PROVIDED WHITE DOUBLE-CONNECTOR HARNESS AS SHOWN. CONNECT C TO HEADLIGHTS CONNECTOR, AND D TO OE VEHICLE SIDE CONNECTOR. F WILL BE USED IN NEXT STEP.