



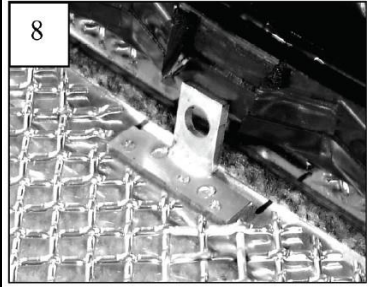
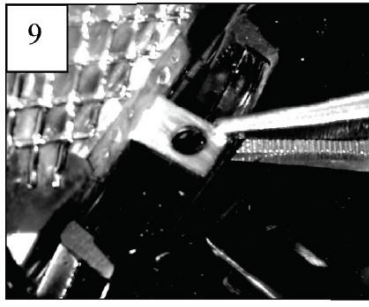
Part#	GR03DFE76D	Application	For 2007 Chevy Silverado1500/2500HD/3500 Classic Style/2006 Chevy Silverado 1500 /2005-2006 Chevy Silverado 1500 HD /2500 HD / 3500
-------	------------	-------------	---

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Rivet Grille	1	Stainless steel	5	Lock Nut	2	10-24
	2	Phillips Screw	6	8#x3/4"	6	Left Billet End Cap	1	/
	3	Flat Nut	6	8#	7	Right Billet End Cap	1	/
	4	Screw	2	10-24x1"				

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Apply masking tape to the chrome and painted areas to prevent scratching. Remove the plastic radiator cover fasteners(1).Release the headlight retaining rod to loosen the headlights. Pull the ends of the grille forward to release the metal clips(2).Now release the metal clips next to the headlights and signal lights( 3).Remove the grille.	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>1</p> </div> <div style="text-align: center;"> <p>2</p> </div> </div> <div style="text-align: center; margin-top: 10px;"> <p>3</p> </div>
3	Place the grille face up on a work-table. Cut the center mesh along the top and bottom opening; make your cut at the base of the mesh(4).Continue the cuts down the grille across the chrome bar as shown(5).Make your cut in line with the grille opening; draw a guide-line using a marker. File or sand your cuts smooth(6).	<div style="display: flex; justify-content: space-around;"> <div style="text-align: center;"> <p>4</p> </div> <div style="text-align: center;"> <p>5</p> </div> </div>

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR03DFE76D	Application	For 2007 Chevy Silverado1500/2500HD/3500 Classic Style/2006 Chevy Silverado 1500 /2005-2006 Chevy Silverado 1500 HD /2500 HD / 3500
			
4	<p>Test fit the grille in place. The mounting tabs align to the inner perimeter of the opening. It is necessary to cut or file the inner mesh smooth so each tab seats flush to the plastic (7&amp;8). Center the grille into the opening. Use vise grip pliers to hold the grille in place at the mounting tabs (9). Drill a 1/8" hole into the plastic at each mounting hole. Use the screws and flat nuts to secure the grille. Slide the billet end caps over the cuts on the cross bar (7). The billet end caps have a 10-24 hole tapped on the back. Drill a 5/32" hole into the plastic; align with the hole in the caps. Use the 10-24 studs and nuts to secure the caps. Re-install the grille assembly back onto the vehicle.</p>		 
5	Installation completed!!!		

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result. Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation. We are not responsible for any damage caused by the installation. Thank you for choosing our product!