
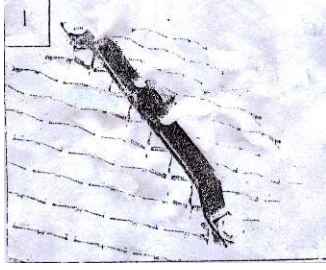

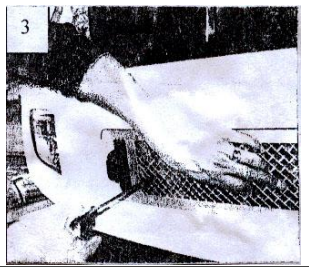


Part#	GR14GED48T	Application	03~07 Infiniti QX56 Low Bumper (not good for equip with speed sensor)
-------	------------	-------------	--

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	5	"J" Hooks	2	
	2	Studs	4	10-24×1"	6	Truss Head Tapping Screws	2	8×1"
	3	U-Nuts	2	8#	7	Raised Extension Brackets	2	
	4	Nylon lock nuts	4	10-24	8			

Install Notes: Overlay Replacement Drill Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Open the hood and test fit the grille in place. Remove the grille and attach the raised extension brackets as shown (1). Place the grille face up on a work-table; install the four studs into the grille. A small amount of liquid thread lock may be applied to the threads. BE SURE NOT OVER-TIGHTEN THE STUDS (over tightening can cause dimpling to the face of the billets).	
3	Slide the u-nuts onto the J hooks. Secure the J hooks to the extension brackets with the screws (Do not tighten). Re-center the grille in place; wrap the hooks around the vertical plastic bars in the opening (2). Carefully tighten the mounting screws (3). It may be necessary to slightly bend the extension brackets so they can allow tension to the J hooks.	 
5	Make sure the grille is centered and tighten the fasteners. but do not over-tighten.	N/A
6	Reinstall the black plastic cover which was removed in step 2.	N/A
7	Installation completed!!!	N/A

The instruction here is for your reference only. You may need to bend the billet grille bars or tabs a little bit to adjust to fit. We strongly recommend the professional installer for best result.
 Please use masking tape and tape the OEM grille shell along the edge to protect your vehicle during installation.
 We are not responsible for any damage caused by the installation. Thank you for choosing our product!