
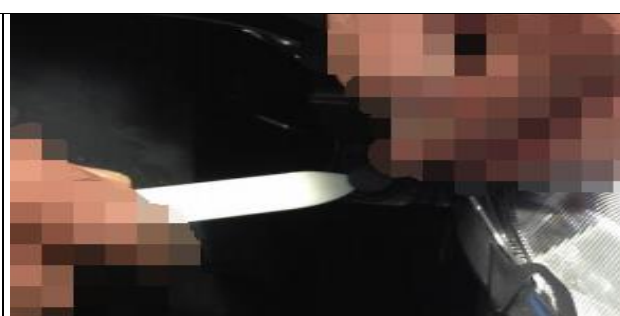






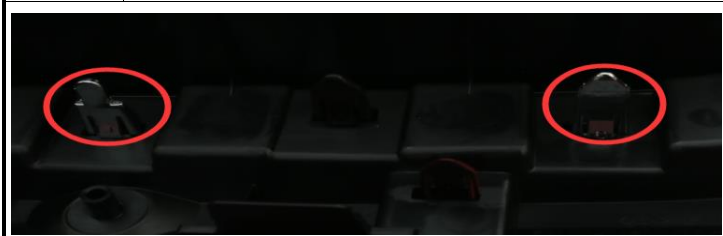

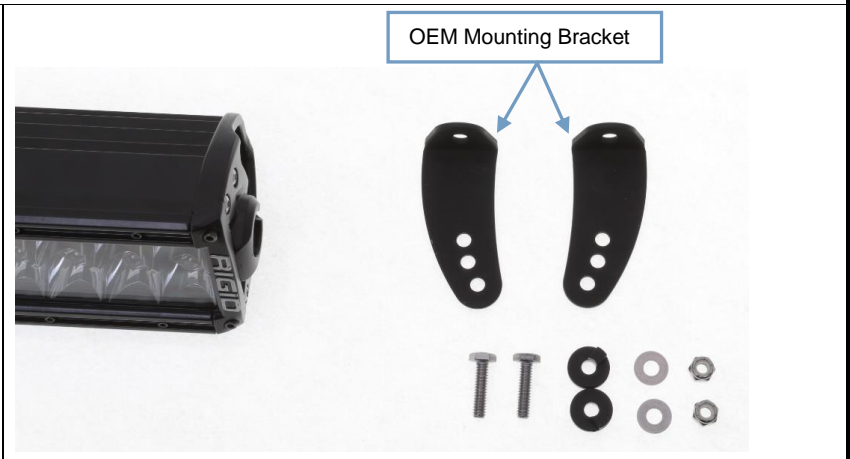
Part#	GR20LFC58C	Application	For 2016-2017 Toyota Tacoma
-------	------------	-------------	-----------------------------

Parts List	Item	Part Name	QTY	Description	Item	Part Name	QTY	Description
	1	Mesh Grille	1	Stainless steel	4	Keyp Nut	12	
	2	Tabs	8		5	Mounting Bracket	2	
	3	Flat Washer	4					

Install Notes: Overlay  Replacement  Drill  Cut

Step	Description	illustration
1	Identify the grille & hardware with parts list.	
2	Use masking tape to protect vehicle while removing and mounting the grille.	
3	Remove and retain the two push pins located at the upper ends of the grille assembly.	
4	Remove and retain the two 10mm screws that secure the grille assembly to the radiator core support.	
		
5	Remove the entire grille assembly by pulling it forward from the vehicle.	
6	With the grille assembly removed from the vehicle, place automotive masking tape on the grille shell and the vehicle to protect from damage/scratches.	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR20LFC58C	Application	For 2016-2017 Toyota Tacoma
7	Flip the grille assembly over and place on a padded work surface to begin disassemble.		
8	Use a Phillips screwdriver to remove the eight screws located around the perimeter of the inner grille assembly. Retain five of the eight screws.		
9	Squeeze each of the grille locking tabs to release them from the grille assembly. The locking tabs require manual pressure to completely free each of them from the grille assembly.		
10	Remove the inner chrome trim ring from the grille assembly.		
11	Using the prior technique, squeeze each of the grille locking tabs to release the grille from the grille assembly.		
			
12	Separate the grille from the grille assembly by pulling the grille forward.		
13	Remove the LED lights and hardware from box. <b>NOTE: Please use RIGID INDUSTRIES E-SERIES MIDNIGHT EDITION.</b>	 <p style="text-align: center;">OEM Mounting Bracket</p>	

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!

Part#	GR20LFC58C	Application	For 2016-2017 Toyota Tacoma
14	Replace the OEM mounting bracket with the supplied ones.		
15	Attach LED lights as shown, and tighten the fasteners.		
16	Center the grille into the opening of the factory grille shell. Secure the stud to the threaded holes on the front of the grille. Be sure the studs are through the OEM grille shell. If the hole is too small, please ream.		
17	Make sure the grille is centered and tighten the fasteners, but do not over-tighten.		
18	Installation completed.		

The instruction here is for your reference only. You may need to bend the grille a little bit to adjust to fit. We strongly recommend the professional installer for best result. We are not responsible for any damage caused by the installation. Thank you for choosing our product!