


Windshield Mounting

Find a safe location on the interior of the vehicle's windshield to mount the pedestal. Firmly push the suction base (A) against the windshield and flip the base lever down (B) to the locked position. See diagram below.

2


Adjust the angle of the pedestal arm by tightening the angle adjustment knob (\mathbf{C}) at the base to the desired angle.

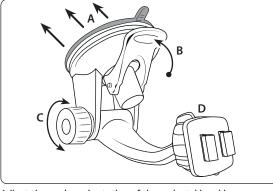

Adjust the angle and rotation of the pedestal head by loosening the swivel-tightening ring (**D**).

Universal Cradle Attachment

• Attach the cradle to the dual T-head by inserting the dual T-tabs (E) into the dual T-slots (F) on the back of the cradle.

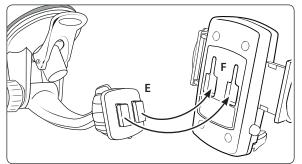

<u>.</u>

Safety Precautions

Do not install Arkon products over an air bag cover or within the air bag deployment zone. Arkon Resources, Inc. assumes no responsibility of liability for injury or death as a result of car crashes and / or air bag deployment.

Arkon is not responsible for any damages caused to your car, your device, or yourself due to the installation or use of this pedestal mount.


Package Contents:

(1) GN014-SBH - Mini windshield swivel suction mount
(1) SM040-2 - Mega Grip universal phone holder with adjustable feet
(1) AP013 - Optional adhesive mounting disk for dashboard or console
(1) Alcohol cleaning pad

Do not place mount in or near an air bag deployment zone or where it will obstruct view of the road.

Device Insertion and Removal from Cradle

Place the phone or device into the cradle with the device sitting on the adjustable support legs (G). Clamp the grip arms (H) inward to firmly grasp the device. Press the release button (I) to open the arms.

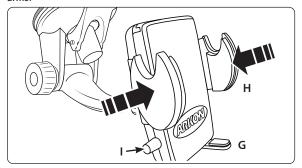

Dash or Console Mounting (Optional)

- Find a safe location on the dash or console. Use the included alcohol pad to clean the mounting surface if necessary. Remove the paper backing on the adhesive disk and firmly press in place. Let cure for 24 hrs. before applying mount.
- Place the pedestal's suction base (A) over the center of the disk. While firmly holding the pedestal on top of the disk, flip the base lever down (B) to the locked position.

