


# Installation Instructions

2650-144B

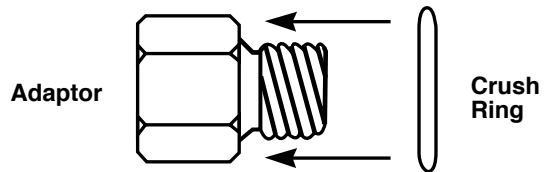

When installing [metric adaptor](#), tighten until the crush ring is flattened. **DO NOT OVERTIGHTEN.**